


MOFI4500-4GXELTE-SIM
Card Version V1/V2/V3
3G/4G/LTE/LTE Advanced High

Performance Router

Updated Manual can be located

at: www.MoFiNetwork.com

1-888-499-0123 (Toll Free)

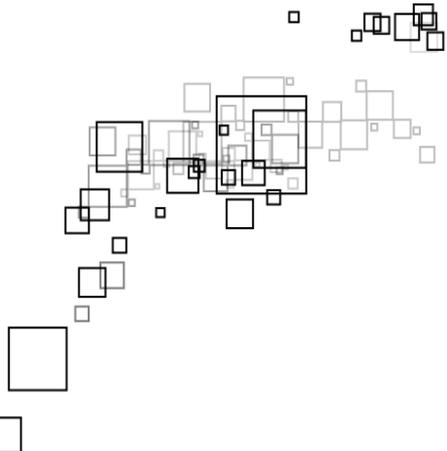

User Manual

Please note that it is recommended to download our full User Manual on our site since this is current version that is enclosed does not have all the features listed.

Manual revision version is 1.5

Table of Contents

About the Product	3
Features	4
Requirements	5
Device Design.....	6
Getting Started.....	8
Plan Your Network:.....	10
Remove or Disable Conflicts:	11
Installing your Router:	13
Connecting to the Internet VIA 3G/4G/LTE:.....	14
WPD (Wi-Fi Protected Setup):.....	15
USB Print Server:.....	16
WAN Connection:	37
Wireless:	38
Port Forwarding:	39
How to forward ports:	36
How to open ports in the router:.....	37
How to set a wireless bridge/repeater:	39
How to do a firmware upgrade:.....	41
How to remote login into router:.....	41
How to modify ports/setting for remote access:	41
Misc:.....	44
Fail Over:.....	46
Load Balancing:	47
IP Pass Through	48
Mofi Recovery:.....	49
Remote Management:.....	55
Mofi Cloud Link:	56
Bandlock	59
Bandwidth Monitoring/User Limits:.....	60
Troubleshooting	62
Regulatory Compliance Notices.....	64

About the Product

- The MOFI4500-4GXELTE SIM Version is an IEEE802.11n wireless broadband Router with 3G/4G/LTE support. Simply put your SIM Card in and plug in the Router, an Internet connection can be accessed and shared virtually anytime anywhere within a wireless broadband network. Includes a cellular module build in that will allow you to insert your SIM card directly in the router.

- 4-Port Wireless-N Broadband Router to Share Wireless Internet Connection with more users.
MOFI4500-4GXELTE-SIM4 integrates router function so that Internet can be accessed through WIFI connection simultaneously. MOFI4500-4GXELTE-SIM4 4-port wireless-N router function provides an excellent solution for sharing a wireless Internet connection and files such as High Definition (HD) video, music, photos and documents with the wireless speed up to 300Mbps.

- Advanced Wireless Security
The MOFI4500-4GXELTE creates a secure Wi-Fi® network by supporting the latest wireless security features to prevent unauthorized access. It supports for 64/128-bit WEP, WPA, and WPA2 to ensure that you will be able to secure your Wi-Fi network, regardless of your client devices. In addition, the 3G/4G/LTE/LTE2 Mobile Router utilizes dual active firewalls (SPI and NAT) to prevent potential attacks from across the Internet.

- Wide Wireless Coverage
The product integrates 2x2 (2 transmit and 2 receive) 5dBi antennas. This MIMO technology overlay the signals of multiple radios, which successfully reduce "dead spots", increase throughput and increase wireless coverage range.

- Easy to install and Use
By connecting a USB modem into USB port of MOFI4500-4GXELTE-SIM4, Internet access can be accessed and shared virtually anywhere within a wire or wireless broadband network. You can also directly connect Ethernet-based devices to its built-in 4-port full-duplex 10/100 switch.

Features

- Multi function Router - Support for 3G/4G/LTE/LTE Advanced mobile broadband plus 4-port wireless N router
- Support (3G/4G/LTE) USB modem connection - to offer a network connection with full mobility
- Latest Cellular Embedded Modem that allows the fastest and most stable connection possible
- Support IEEE802.11b/g and 11n wireless standard - data transfer rate reaches up to 300Mbps
- Support WAN Port and 4-Port 10/100M Ethernet - dual way connections to DSL/Cable modem for Internet access
- Support for 64/128-bit WEP, WPA, and WPA2 - ensure secure WiFi network, and prevent unauthorized access
- Support WiFi Protected Setup - reduce by half the user steps to configure a network
- Adopt 2x2 MIMO technology - increase throughput and increase wireless coverage range
- Detachable Antennas - allows flexible gain performance antennas for both the cellular and wifi connection
- Auto Fail Over (Can have a cellular and Cable/DSL/Satellite connection, if the Cable/DSL/Satellite connection is lost, the cellular connection will take over and as soon as the connection is established again, it will revert back to the Cable/DSL/Satellite connection.
- Many more features is included in the router which you can find at www.mofinetwork.com for help and videos. You can also send us an email anytime to: support@mofinetwork.com

Requirements

- Your computer must meet the following minimum requirements.
- Any internet browser to surf the internet
- Ethernet network adapter or wifi network adaptor
- The MOFI router will work with basically any operating system and devices.
- When changes are being made in the router, it is recommended not to use any Google Chrome
Use any other browser such as Internet Explorer, Firefox or Safari.
- After set up is completed in router, you can use any browser such as Google Chrome if needed.

Device Design - Front Panel

Note: Includes 2 External Antenna for just the WiFi signal & 4 External Antenna for the Cellular Signal




	LED	Behavior	Description
A	Power/Boot Status		Blink when booting, Solid when completed boot.
B	Internet	On	Have internet access
		Off	No Internet access
C	Wi-Fi	On	Wireless is enabled (will blink to show the wireless traffic)
		Off	Wireless is disabled
		Blinking Very Fast	Normal Use Unit is in recovery mode
D	WAN	On	Connected to a Cable/DSL/Satellite
		Off	No Modem connection
E	Ethernet 1-4	On	Connected to an Active Ethernet Device
		Off	No Ethernet Connection
		Blinking	Transmitting/Receiving Data

Back Panel




	Label	Description
A	Ethernet Port 1-4	Connecting with computers/devices using an Ethernet cable
B	WAN	Connect to a modem using an Ethernet cable
C	Reset/WPS	Press for 10 seconds to reset to the Factory Default. Press for 2 seconds to set in WPS mode
D	Power Jack	Use 12V 1.0A Power Adapter

Getting Started

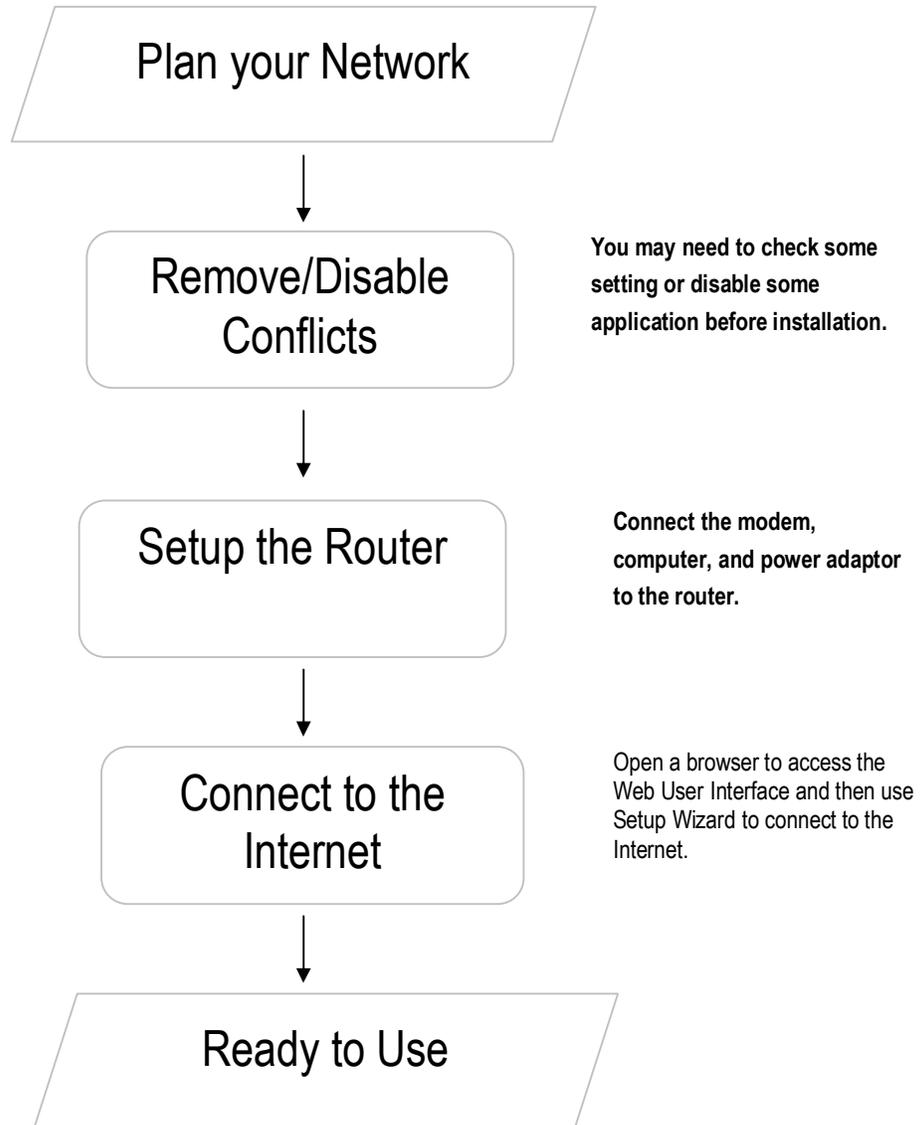


Plan Your Network

1. Using a 3G/4G/LTE USB Modem Stick

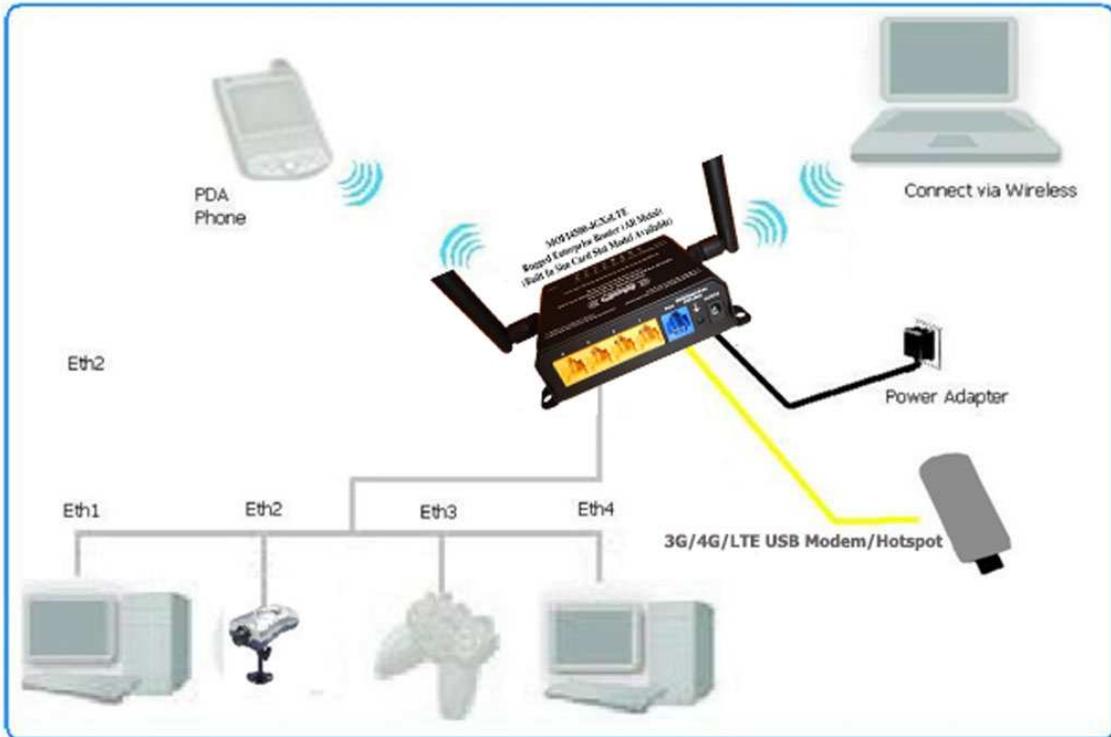

2. Using a DSL/Cable modem (If your DSL/Cable modem is both a router and a modem, contact us.

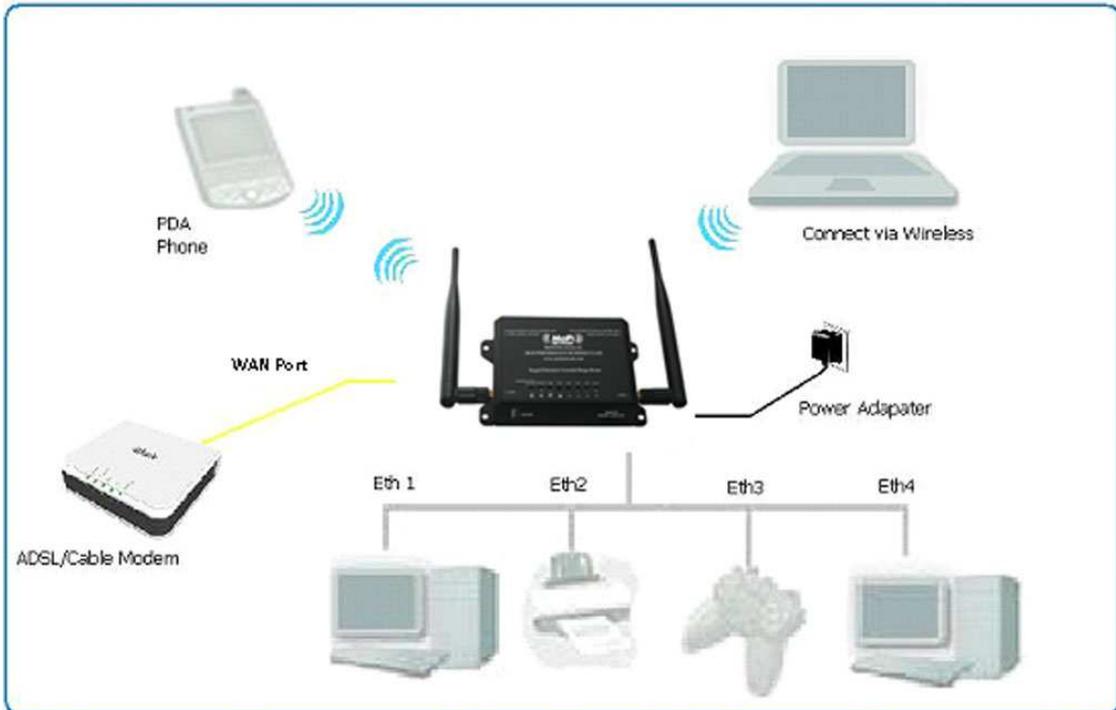

Remove or Disable Conflicts

To make sure the router installation moves on smoothly, you need to remove or disable conflicts that may interfere the installation. Probable conflicts may include:

- Internet sharing applications
- Proxy software
- Security software
- TCP/IP settings
- Internet properties
- Temporary Internet files

Internet Sharing, Proxy, and Security Applications

Internet sharing, proxy software, and firewall applications may interfere with the router installation. These should be removed or disabled before start the installation.

If you have any of the following or similar applications installed on your computer, remove or disable them according to the manufacturer's instructions.

Internet Sharing Applications	Proxy Software	Security Software
Microsoft Internet Sharing	WinGate	Symantec
	WinProxy	Zone Alarm

Configuring the TCP/IP Settings

Check if your computer uses default TCP/IP Settings

To check the TCP/IP properties:

1. Click the Start button, and then click Run. This opens the Run dialog box.
2. Type in ncpa.cpl, and then click OK. This opens the Network Connections in your computer.
3. Right-click LAN, and then select Properties. This opens the Local Area Connection Properties dialog box.
4. Select Internet Protocol (TCP/IP), and then click Properties. This opens the Internet Protocol (TCP/IP) dialog box.
5. Select Obtain an IP address automatically.
6. To close the Internet Protocol (TCP/IP) dialog box, click OK.
7. To close the Local Area Connection Properties dialog box, click OK.

Configuring Internet Properties

To set the Internet Properties:

1. Click the Start button, and then click Run. This opens the Run dialog box.
2. Type in inetcppl.cpl, and then click Ok. This opens the Internet Properties.
3. Click the Connections Tab.
4. In Dial-up and Virtual Private Network settings, select Never dial a connection.
5. Click Ok the button to close the Internet Properties.

Removing Temporary Internet Files

Temporary Internet files are files from Web sites that are stored in your computer. Delete these files to clean the cache and remove footprints left by the Web pages you visited.

To remove temporary Internet files:

1. Click the Start button, and then click Run. This opens the Run dialog box.
2. Type control, and then click OK. This opens Control Panel.
3. Double-click Internet Options. This opens Internet Options.
4. In the Temporary Internet Files pane, click Delete Cookies.
5. Click Delete Files.
6. To close Internet Properties, click OK.

Installing your Router

The MOFI4500-4GXELTE V2 SIM Version can be used in many ways including as a 3G/4G/LTE/LTE2 router or just a regular Cable/DSL/Satellite high speed router.

Using a SIM card from your provider direct from provider

1. Insert your SIM card in the SIM card slot on the side of the router and connect all 4 antennas to router. (Note that when looking down on the router, the sim card should be facing up and the cut on the sim card should go in the router first and you should feel a click when the sim card is in correct. Note also that only a large sim card (2FF) can be used so if you have a micro or a nano sim, you need to use the sim card adaptor to make it to the largest size.)
2. Connect the power cable to the router's power jack and plug it in to the wall socket.
3. Connect your PC to any available Ethernet port using an Ethernet cable or connect via wireless. (do not use the WAN)
4. At this point, your connection should be connected. If not, you might need to go to the 3G/4G/LTE build in modem section in basic mode and make sure you provider and correct APN is selected

Using a DSL or Cable Modem or Satellite Modem

If you choose to use a DSL, Cable or Satellite modem you are required to have the following:

- DSL or cable modem or Satellite modem
 - Active Internet Account
1. Connect your DSL, Cable or Satellite modem to the router's WAN port using an Ethernet cable.
 2. Connect the power cable to the router's power jack and plug it in to the wall socket.
 3. Connect your PC to any of available Ethernet port using an Ethernet cable or connect via wireless.

If you are using a Satellite system like Xplornet, you should log into the MOFI router and run the wizard. You will see the option in the wizard to select Xplornet. This will set up the router with optimized satellite settings automatically.

Note: Ensure that the router's IP address does not conflict with the DSL/Cable/Satellite modem. Please refer to your modem's User Manual on how to change the LAN IP address. The default IP on the MOFI4500-4GXELTE is 192.168.10.1

Connecting to the Internet VIA 3G/4G/LTE/LTE2

Here is a video to help also on using the wizard to set up the router

<https://www.youtube.com/watch?v=jevcVD5t0G8&t=1s>

If you have a cable, DSL or Satellite modem that does not need to have a username/password, just connect the output from the Cable/DSL/Satellite to the WAN port of the router then repower your Cable/DSL/Satellite box and you should be online.

To Connect to the Internet via the Web User Interface with a 4G//LTE/LTE2 connection, you only need to put the sim card in and the router should auto detect and it should work. If you need to manually enter the info, do the following:

1. Open your Internet web browser.
2. Type `http://192.168.10.1` in the address bar and press enter. This opens the login authentication page.
3. Type your Username and Password. Your default Username is root and the password is: admin
After you log in, you should not save the log in password if it ask you.

The router should self configure itself to work with your modem

4. Run the wizard on the left and follow the on screen options



If you have a micro or nano sim, you can use the included sim adaptor to make it into a standard full size sim. Turn the router on the bottom and you will see this picture.

Note the gold portion of the sim card is facing upwards and slot side in first.
Place your sim over this picture and then move it over and push in side of router.
Click in if it is inserted the correct way.

WPS (Wi-Fi Protected Setup)

(Note this feature is not recommended and is disabled by default)

WPS button allows you to activate Wi-Fi Protected Setup (WPS). When you press the reset button and hold it down for 2-3 seconds, it automatically detects and connects wireless clients into the wireless network by broadcasting the wireless network settings from your Access Point to you wireless device/s. Note also this LED shows your wifi status so when it is blinking, it is the status of your receive/transmitting on your wireless network. Note that WPS must be active by going in basic mode then wifi. It is disabled by default for security reason
Note not to hold the reset button down too long as it will do a factory default on the router so just hold down for 2-3 seconds max.

To setup WPS:

Press the reset button and hold it down for 2-3 seconds (back of the unit), If you hold it longer than 5 seconds, it will reset the router.

Within 2 minutes, press the WPS button on the Wireless Client.

Note that you must select WPA2-PSK Security Type for this to be active. Note also that the WPS PIN is set to dynamic and will change everything it is accessed in the router.

WPS is not recommended to be used as it opens a major security issue as that it is why it is disabled by default.

Note: WPS can only be used with wireless client devices that have a compatible WPS component.

USB PRINT SERVER


This option is used if you have an old USB printer and want to share this on your network so all devices that can install your printer driver can print to.

In basic mode, go to Network --> USB Print Server

Check to enable it and then save and reboot router

Now, you will need to re-install the driver for your printer on all your device you can do and configure it using the instruction in next part.

MOFI NETWORK MOFI4500-4GXeLTE-V2

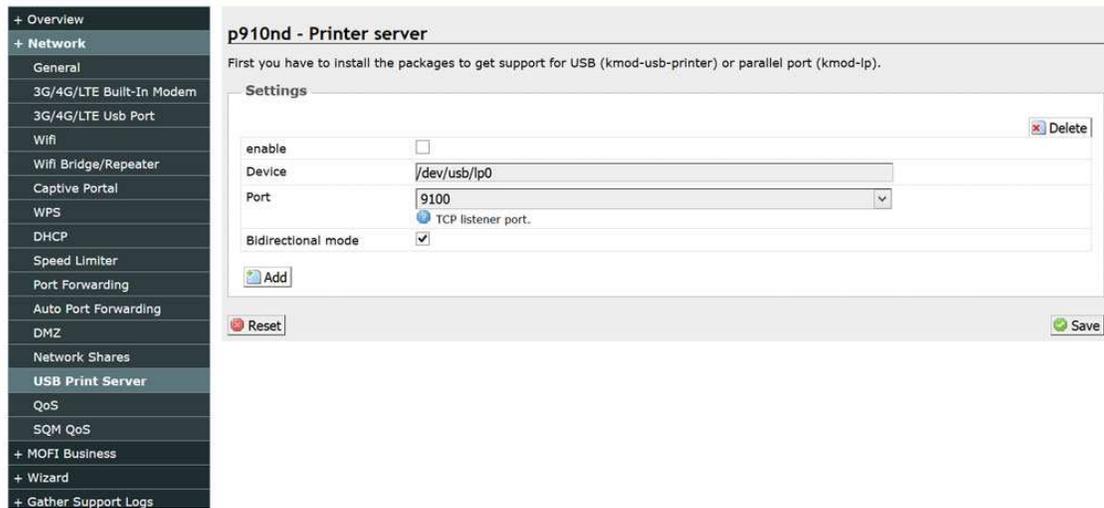


ADD A NETWORK PRINTER

FOR WINDOWS 8


Type "Control Panel"


Click on Hardware and Sound > Devices and Printers > Add a printer

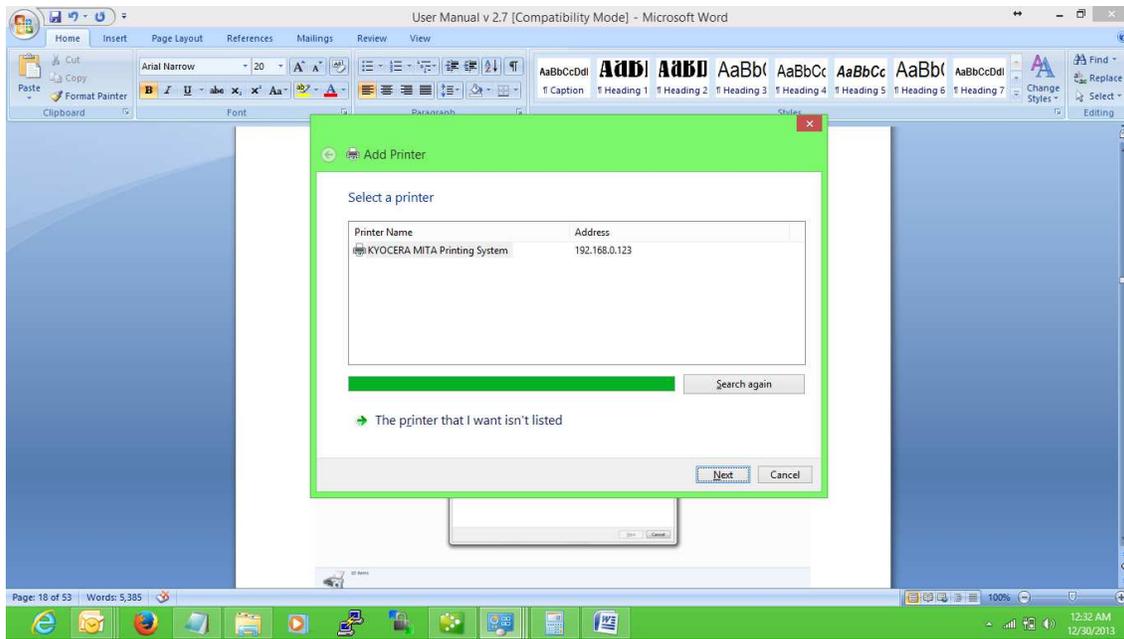


If needed, click on “The printer that I want isn’t listed”

Select “Add a printer using a TCP/IP address or hostname”

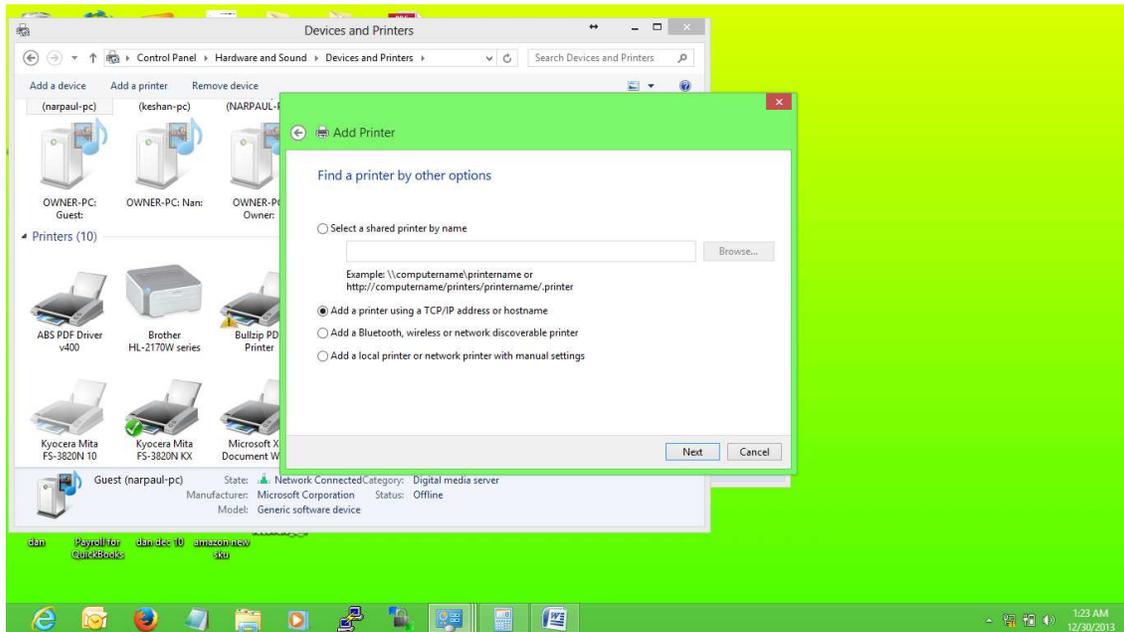


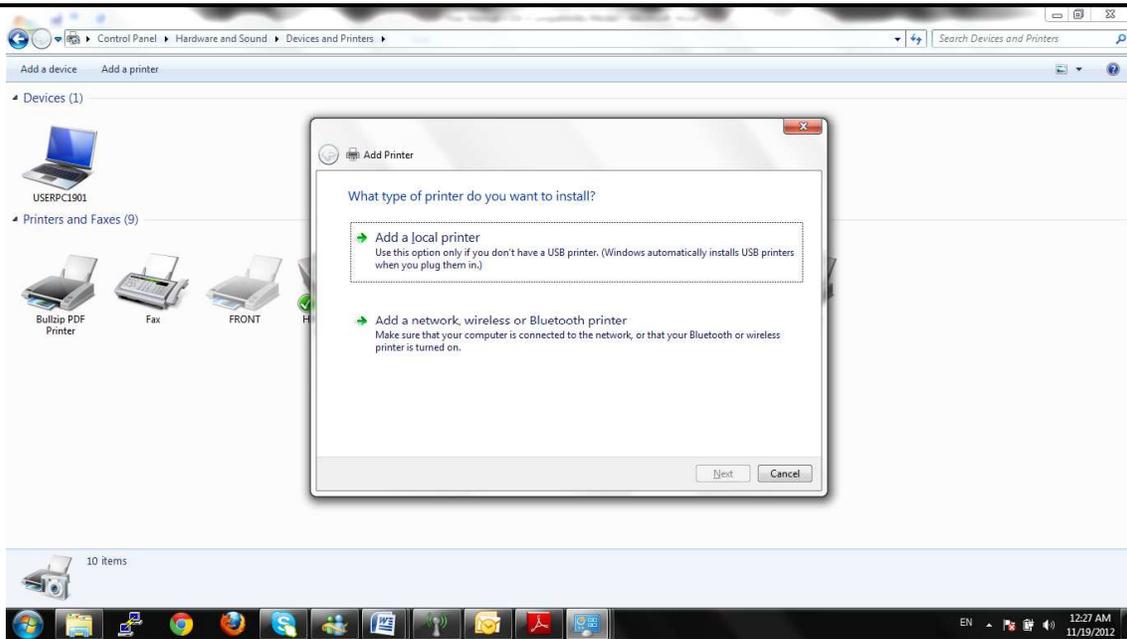


Stop the Auto Detect and click on
"The printer that I want isn't listed"

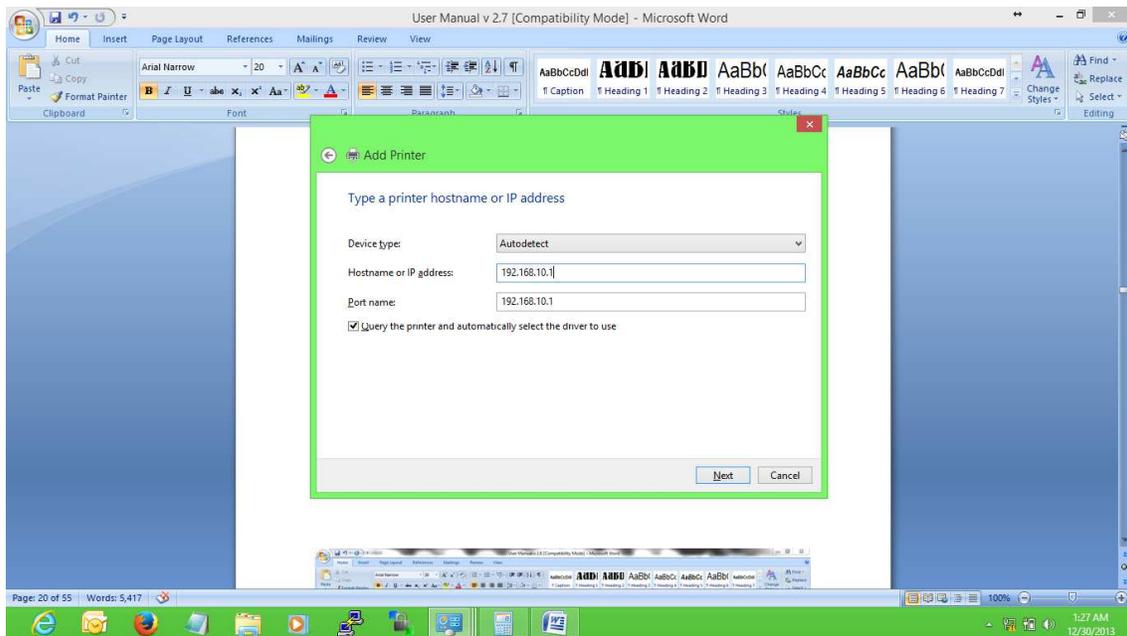


Enter IP address: 192.168.10.1 or whatever your router's ip address is and then click on Next

Windows will now search for the printer

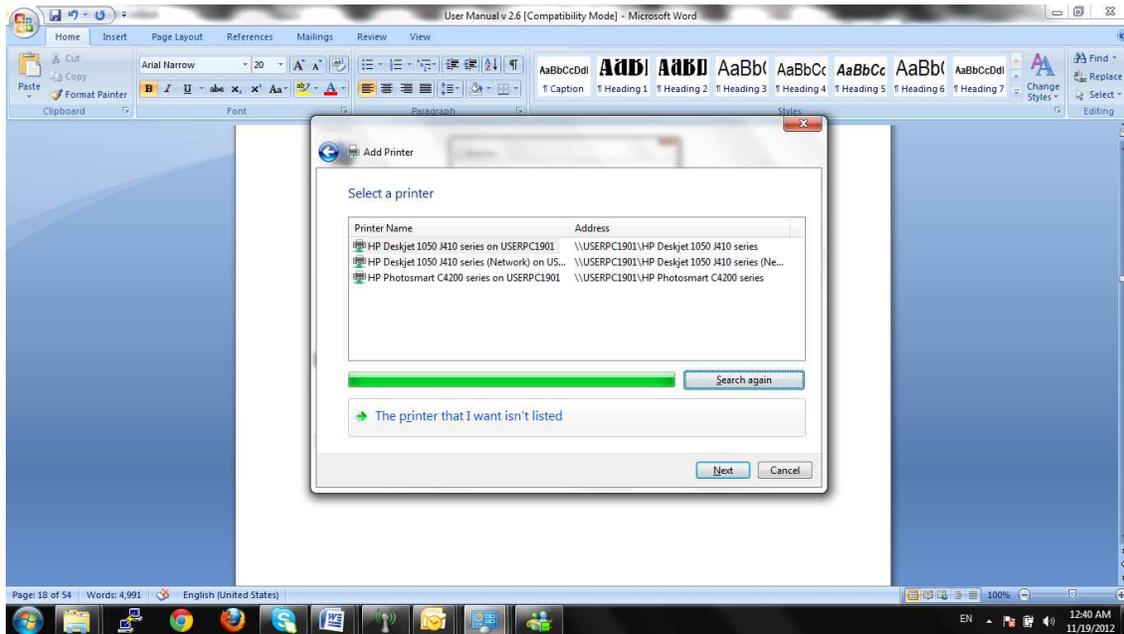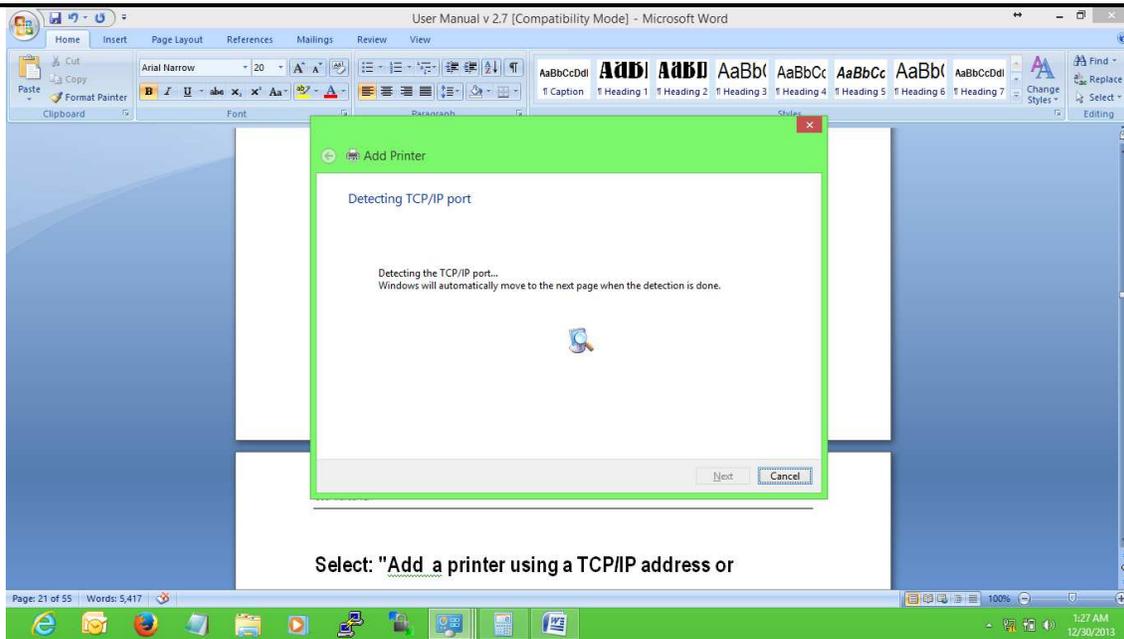

Select: "Add a printer using a TCP/IP address or hostname" and press Next

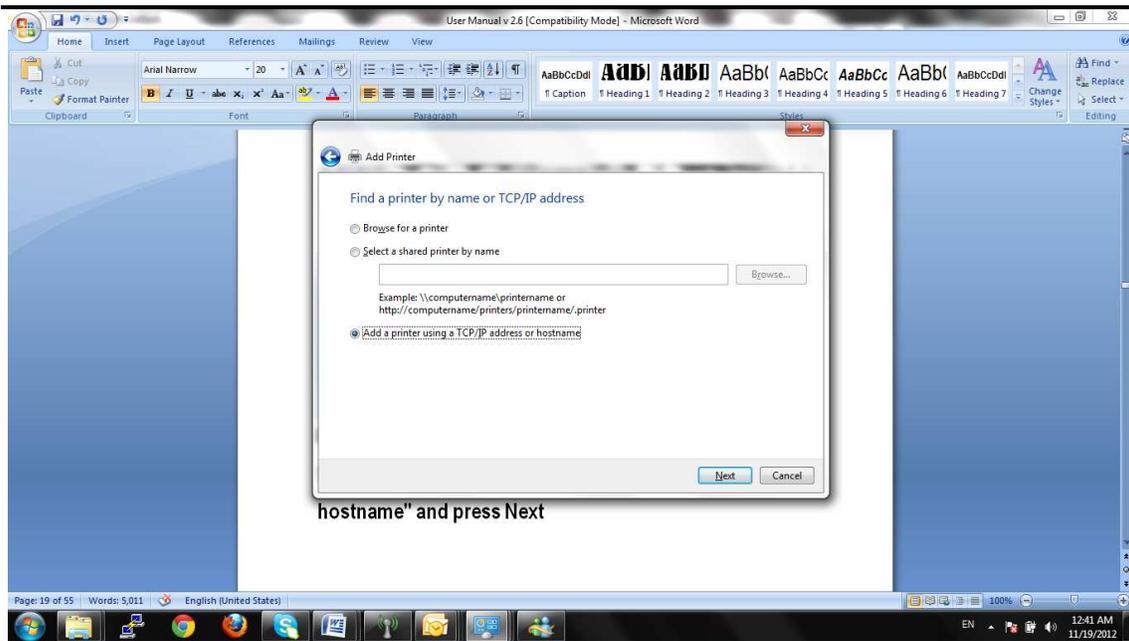

hostname" and press Next

For Device type: Select TCP/IP Device


Enter Hostname or IP address: 192.168.10.1

The Port Name should auto file with same: 192.168.10.1


You can leave the check box "Query the printer and automatically select the driver to use" and then go Next

Windows should detect the settings

Select Custom Settings and leave everything as default:

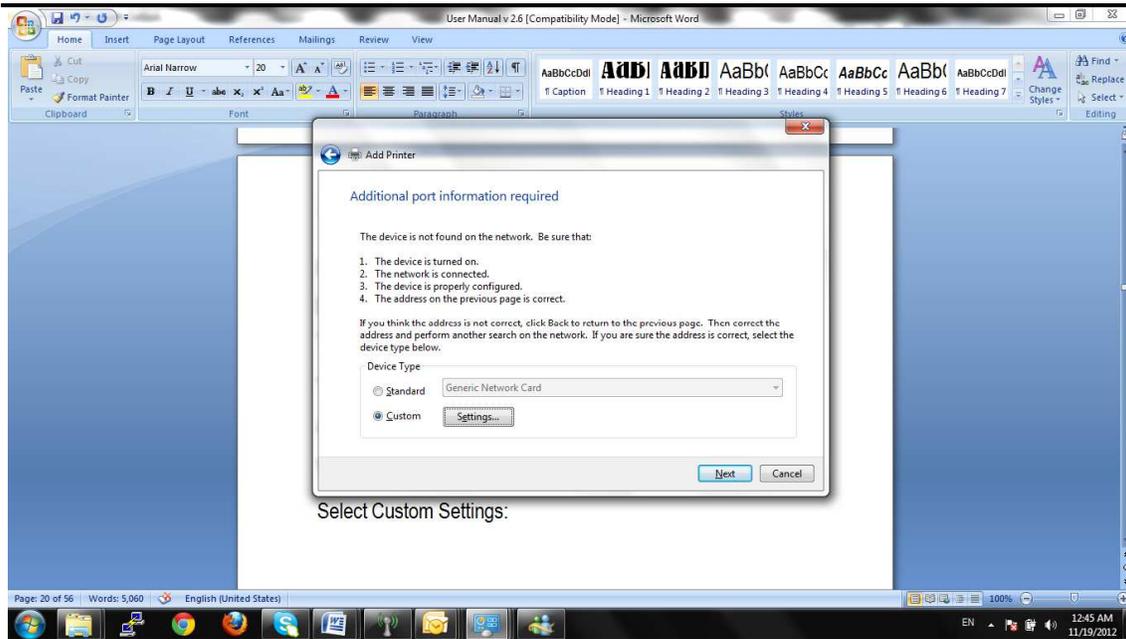

Select Custom Settings:

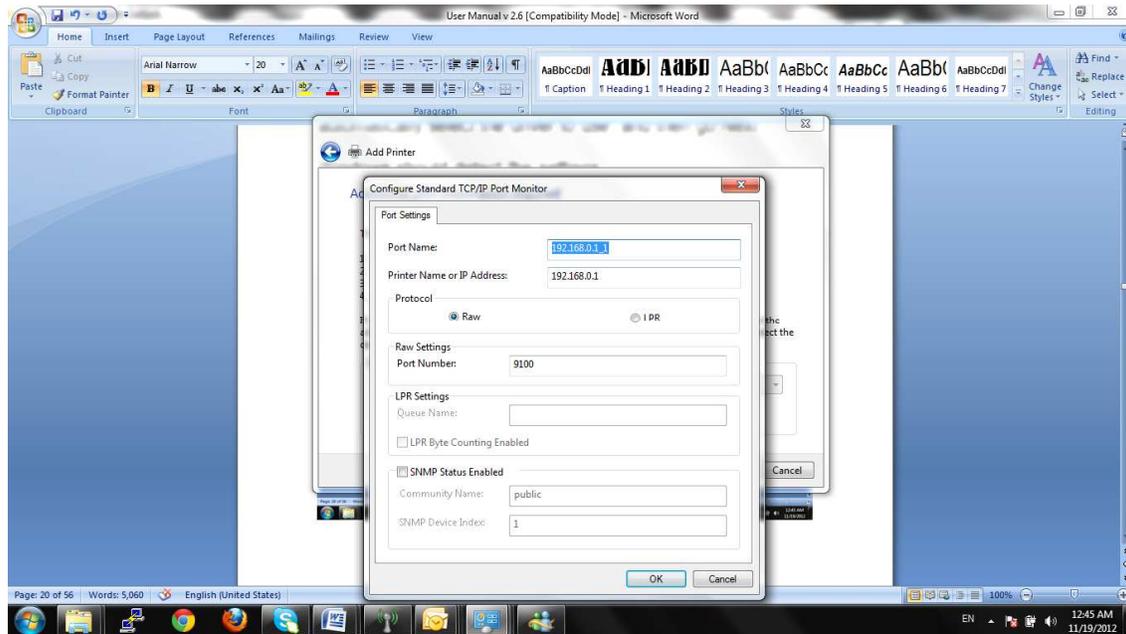

port number should be 9100 as RAW

press OK to continue

At this point, this is why you will need to have your printer driver (same as you have when you installed it on your pc)

Select Have Disk, locate and it will install the printer.

You printer will show up, go Next to continue


Select "Use the driver that is currently installed (recommended)" then go next

Enter the printer name you want to called (suggested you put Network at the end so you do not confuse the one that you currently may have installed. At this point, everything should be installed and your printer should work.


FOR WINDOWS 7

Click on the Start Button > Control Panel > Hardware and Sound > Devices and Printers > Add a printer


Select Add a network, wireless Printer

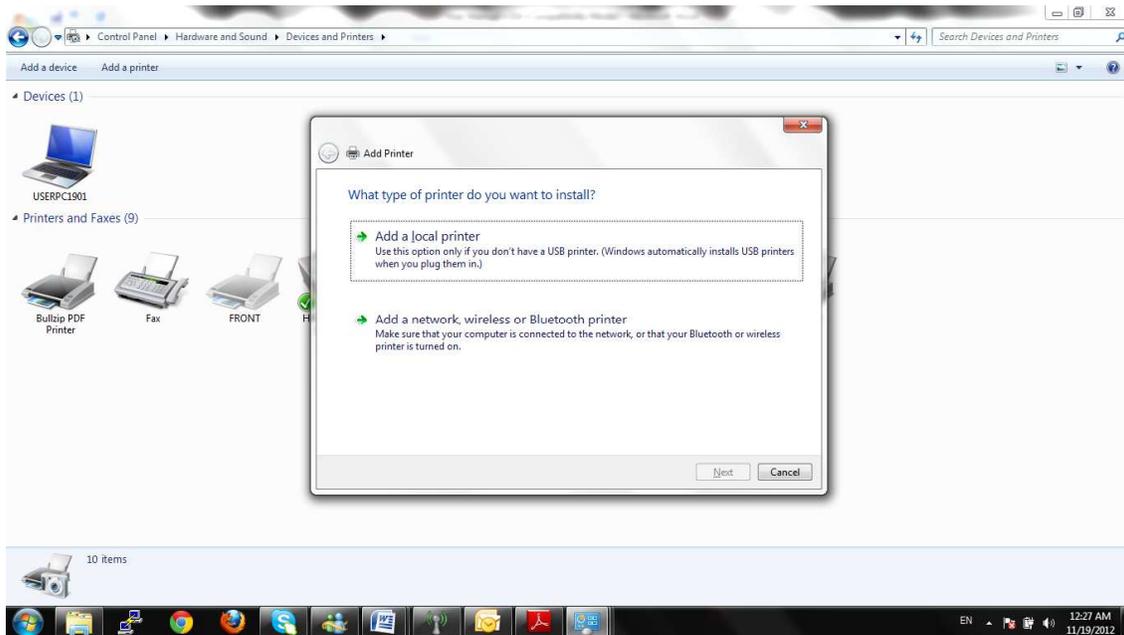

Stop the Auto Detect and click on
"The printer that I want isn't listed"

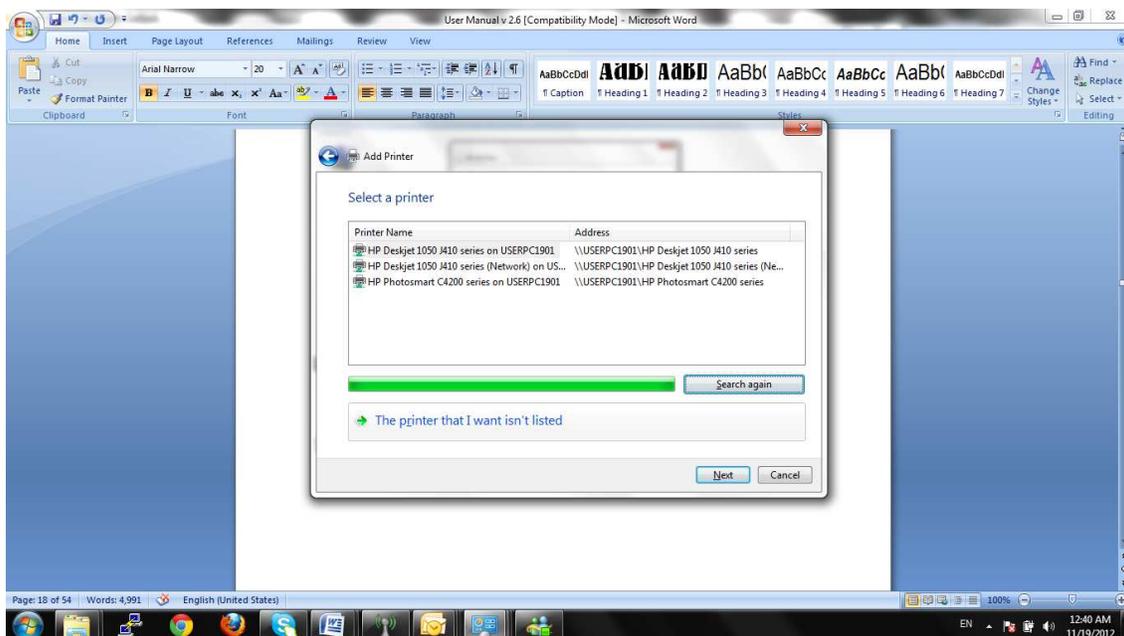

Select: "Add a printer using a TCP/IP address or hostname" and press Next

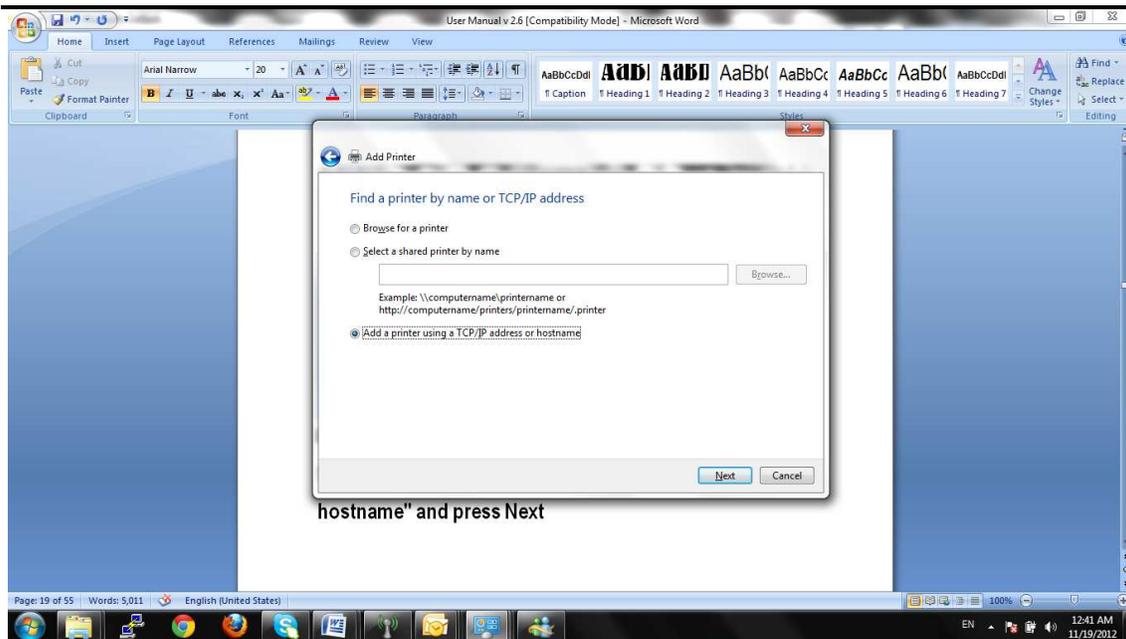

For Device type: Select TCP/IP Device


Enter Hostname or IP address: 192.168.10.1


The Port Name should auto file with same: 192.168.10.1

You can leave the check box "Query the printer and automatically select the driver to use" and then go Next

Windows should detect the settings

Select Custom Settings and leave everything as default:

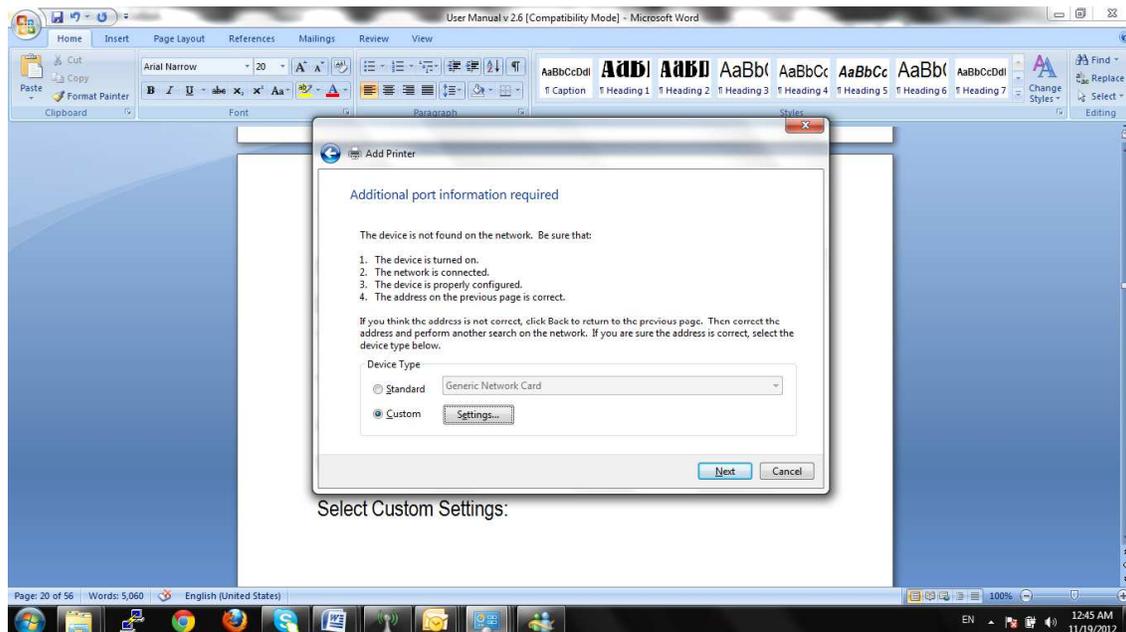

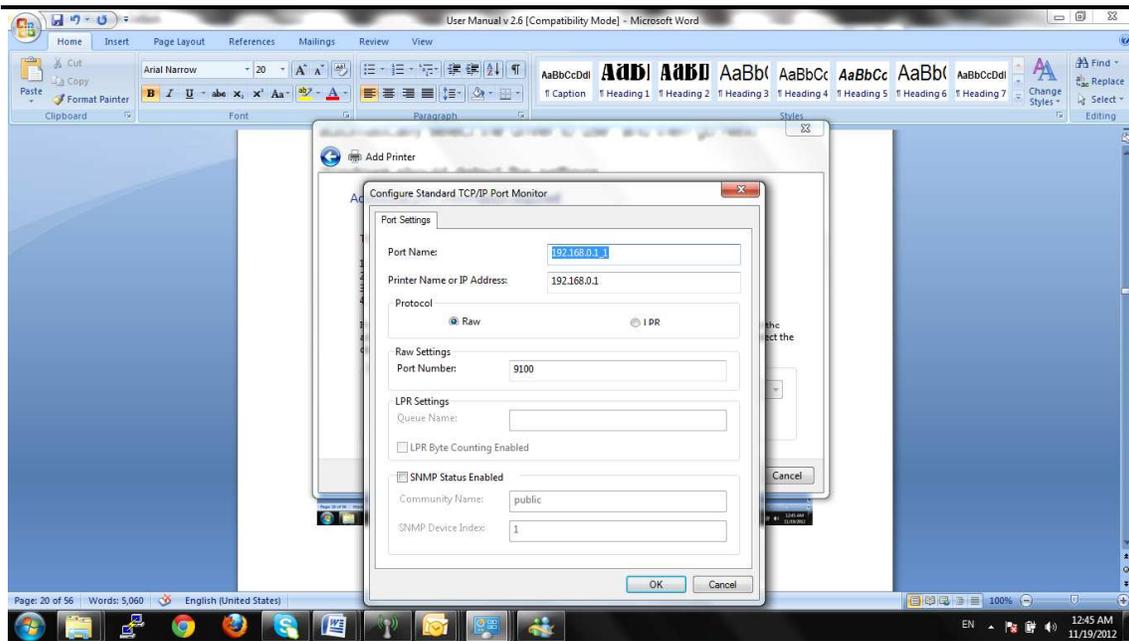

port number should be 9100 as RAW

press OK to continue

At this point, this is why you will need to have your printer driver (same as you have when you installed it on your pc)

Select Have Disk, locate and it will install the printer.

You printer will show up, go Next to continue


Select "Use the driver that is currently installed (recommended)" then go next

Enter the printer name you want to called (suggested you put Network at the end so you do not confuse the one that you currently may have installed. At this point, everything should be installed and your printer should work.


FOR WINDOWS XP

Before you continue, ensure that you have installed the printer's driver on this computer and the printer is attached to the MOFI4500-4GXELTE-SIM4

Click on the Start Button > Control Panel > Printers and Other Hardware > Printers and Faxes.

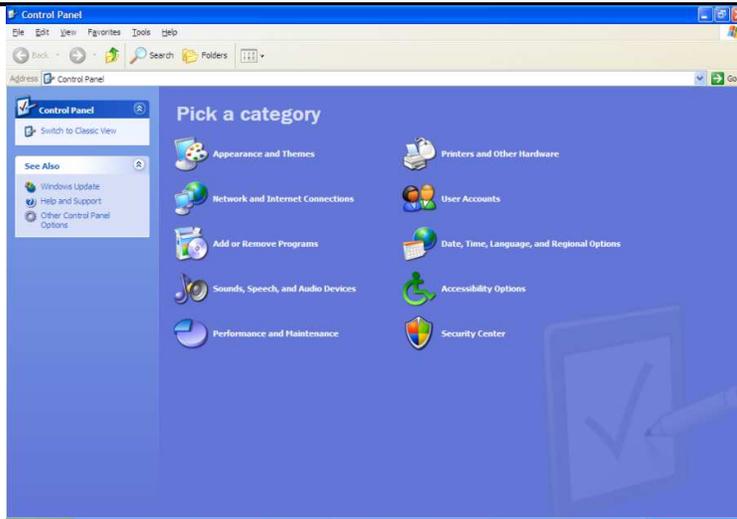


Click on the File Menu > Add Printer.

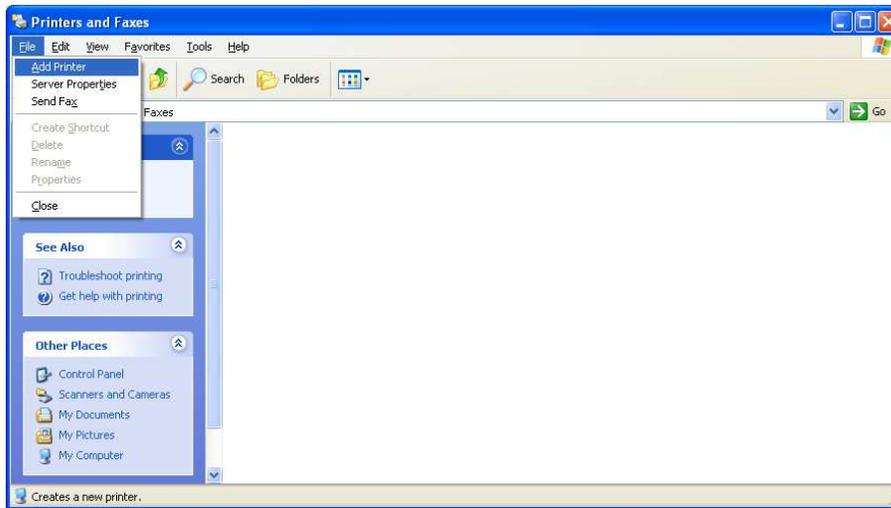


Click on Next on the Add Printer Wizard page.



Choose Local Printer attached to this computer and click Next, on the Local or Network Printer page.

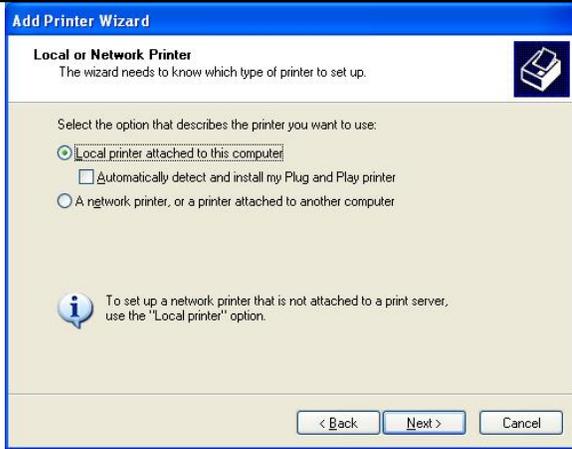


Choose Create a new port and on the drop down box choose Standard TCP/IP Port then click Next.

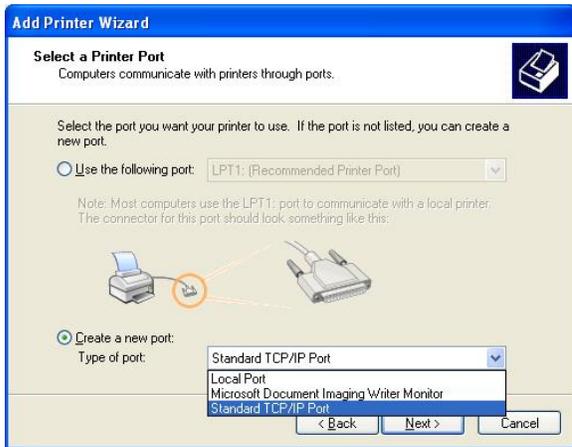


Click Next button on Welcome to the Add Standard TCP/IP Printer Port Wizard.




Enter your MOFI4500-4GXELTE Default Gateway IP address 192.168.10.1 then click Next.

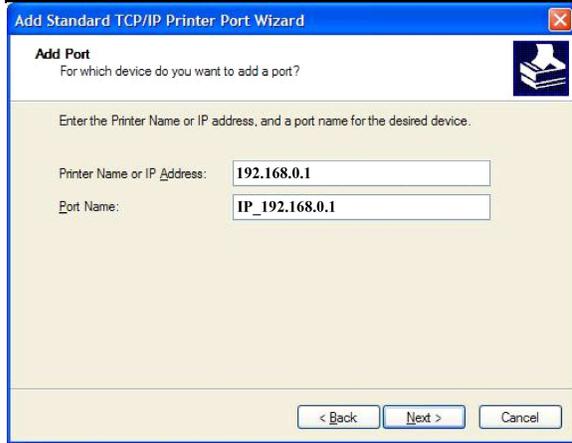

Under Additional Port Information Required choose Custom then click Next

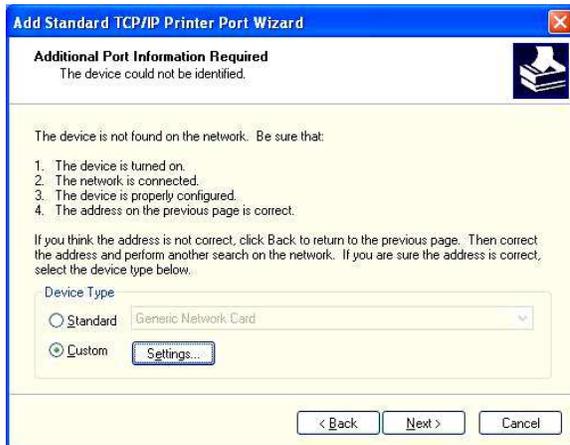

Once the computer detects the printer on the Print Server, it will ask for the printer manufacturer and model, a list of printers will be shown, select the your printer from the list and click OK.

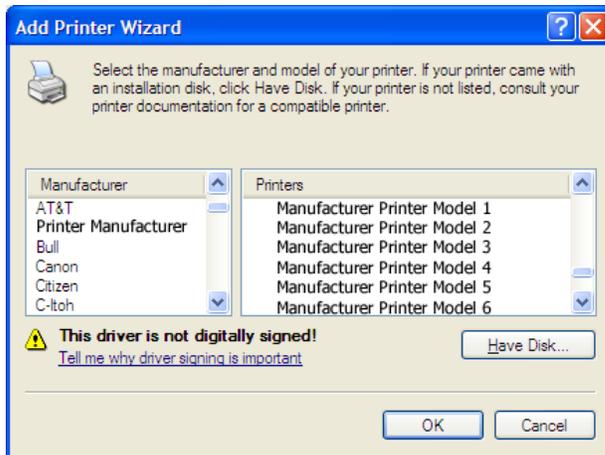

Choose Keep existing driver (recommended) then click Next until you reach Completing the Add Printer Wizard.



Click Finish to complete the installation.



PRINTING A TEST PAGE AFTER INSTALLATION

Open the Printers and Faxes page from Control Panel.


Right click on the new printer and click on Properties.

Click on the Print Test Page button on the Printer properties page, the test page will be printed on the network printer.


FOR WINDOWS VISTA

Click on the Start Button> Control Panel.


Click Printer under the Hardware and Sound category.

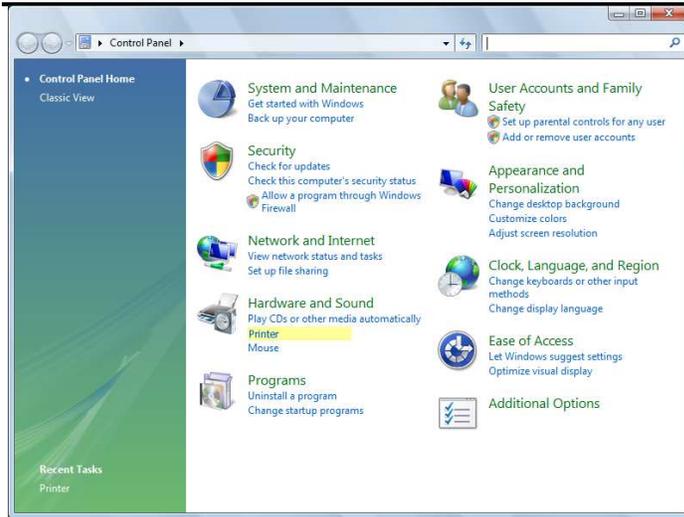


Click on Add a Printer.

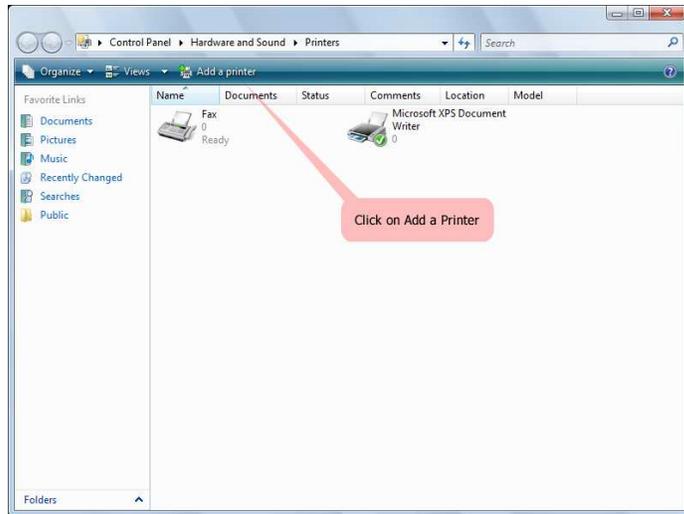


Click on Add a local printer then click Next.

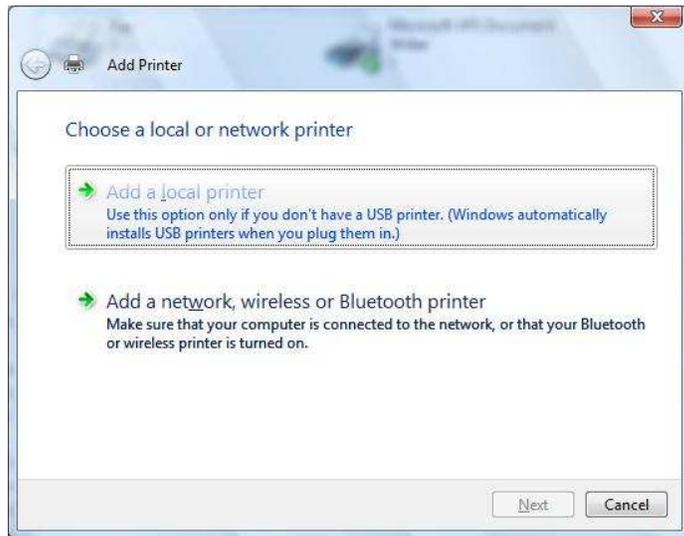


Select Create a new port, on the drop down box choose Standard TCP/IP port then click Next.

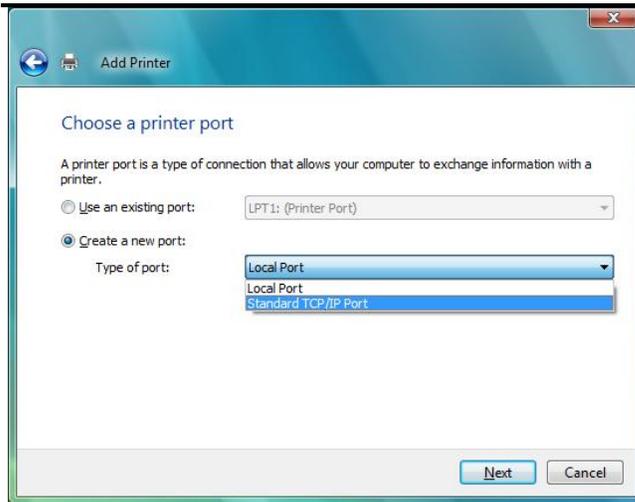


Enter the Default Gateway IP address of your MOFI4500-4GXELTE-SIM4 router 192.168.10.1 then click Next.

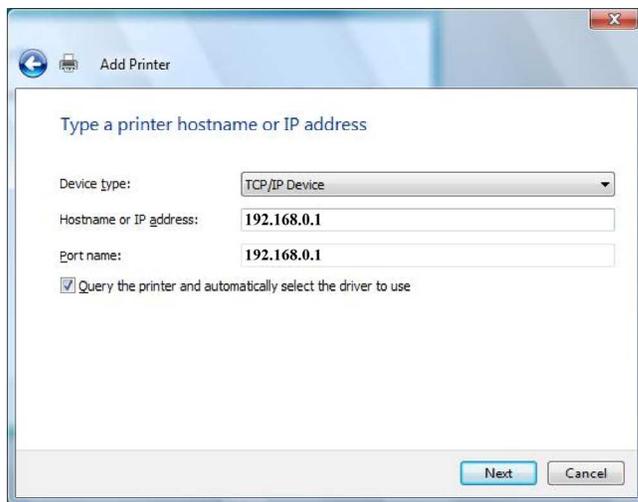


Under Additional Port Information Required window, select Custom then click Next.

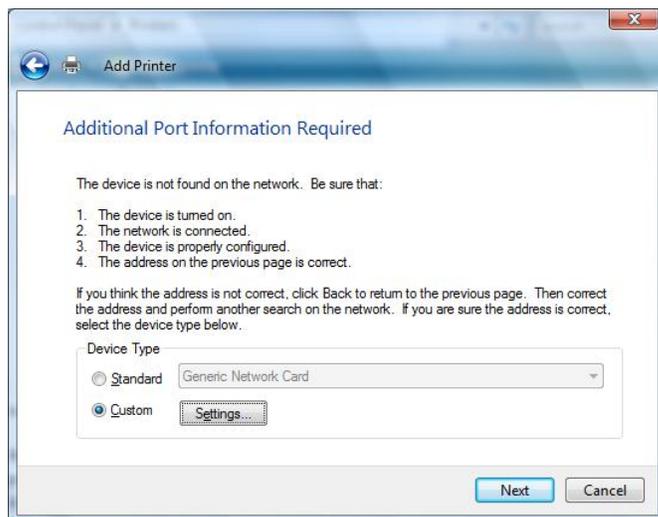


Once the computer detects the printer on the Print Server, it will ask for the printer manufacturer and model, a list of printers will be shown, select the your printer from the list and click OK.

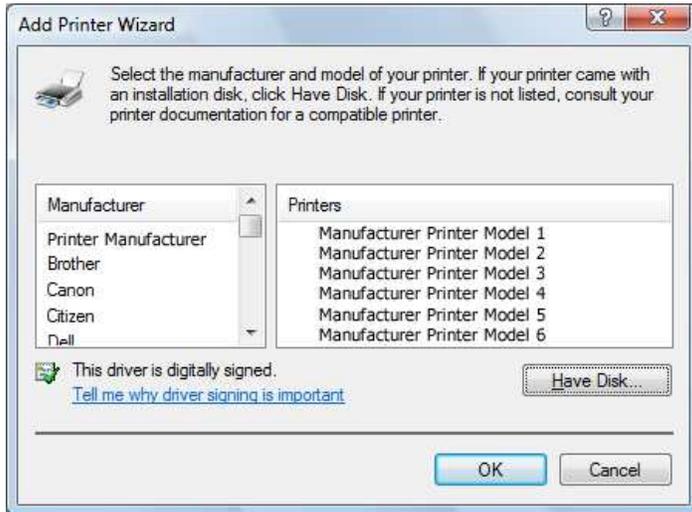


Select Use the driver that is currently installed then click Next.

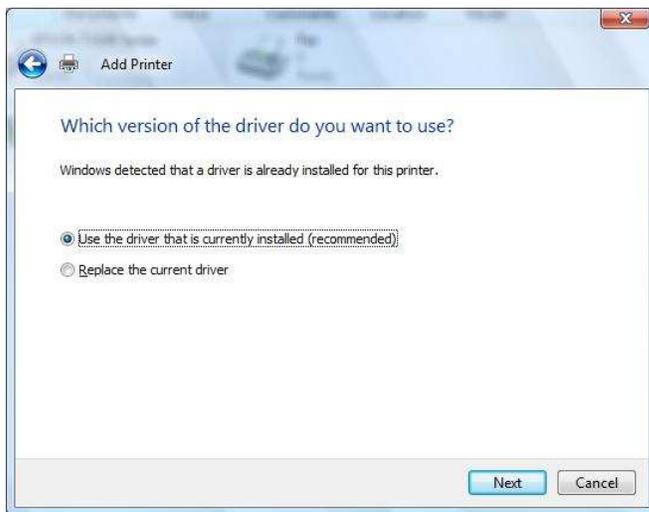


To print a test page click on Print a test page on the confirmation screen, click Finish to complete the installation.

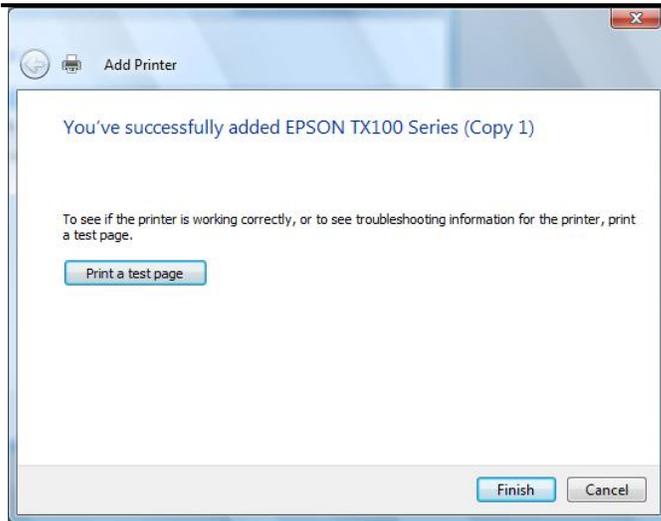

If Printing was unsuccessful right click on the Printer's icon then select Properties.

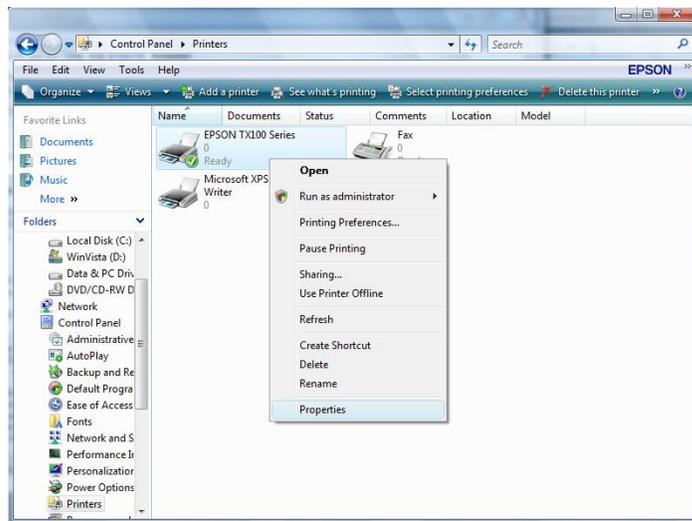

Under printer's Properties click Port Tab and tick the IP address (192.168.10.1) that was set on previous settings then click Apply.

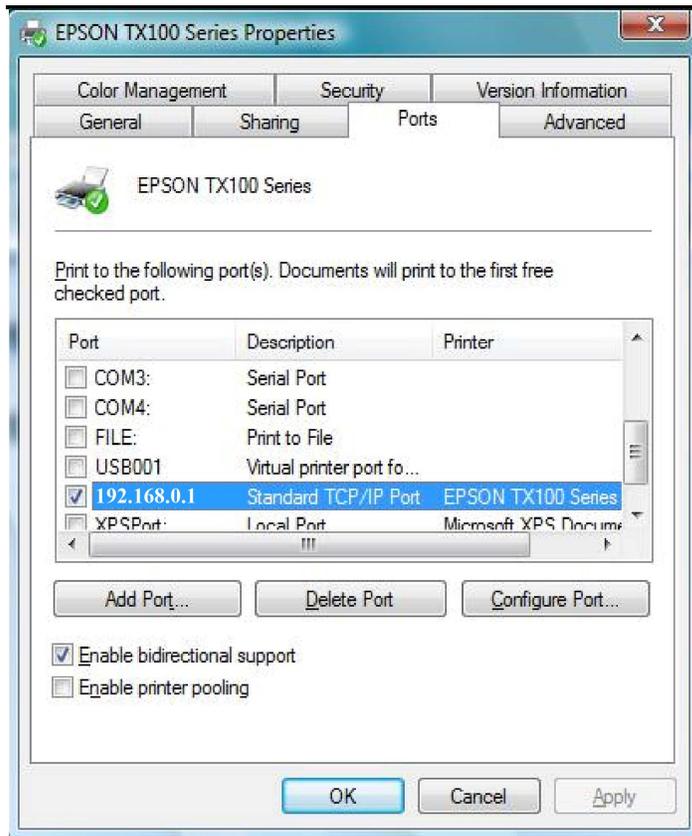

Note: Scanning, Faxing and Photocopying functions on Multifunction printers are currently not supported on the MOFI4500-4GXELTE-SIM4 , Print function is the only feature that will work on these printers type when connected to the MOFI4500-4GXELTE-SIM4 .

WAN connection

By default, the WAN connection type is set to automatic which is DHCP. Most Cable and DSL connections are automatic.

On this section you can choose your Internet connection type from Static IP (manual), PPPoE, PPTP, and DHCP (Automatic)

If you need to change this to PPPoE or PPTP or just want to disable it, log into the router and in basic mode, click on Network and go to the bottom "Internet Connection"

If you have a DSL connection, you may need to use automatic or PPPoE. If automatic does not work, call your provider and ask them what type of connection you have as if you have PPPoE, you will need to also get your username and password that you will have to put in the router for this to work.



1. Static IP (Manual)

Select this Internet connection type if your ISP provides the IP addresses that are required to establish a connection.

- a.) IP Address - Enter the IP address provides by your ISP.
- b.) Subnet Mask - Enter the Subnet Mask provides by your ISP.
- c.) Default Gateway - Enter the Default Gateway provides by you r ISP.
- d.) DNS Server - Enter the Primary DNS server IP address provides by your ISP. If you have a secondary DNS Server, put a space and type it in.

2. DHCP (Automatic)

Select this Internet connection type for your router to get an IP address from your ISP or the DHCP server.

3. PPPoE

Select this Internet connection type if you're ISP provides you a username and password to establish a connection.

- a.) Username - Enter the username provides by your ISP
- b.) Password - Enter the password provides by your ISP
- c.) Check the automatically reconnect if you want your connection to automatically reconnect if you get disconnected.

Note: Please contact your Internet Service Provider if you do not have this information.

Wireless

By default, the wireless network name is: MOFINETWORKXXX where the XXXX is the last 4 digits of your router's mac address.

If you do not require changing this and do not want to set up a wireless password, you do not have to do anything else.

If you want to change the network name (ESSID) or add a wireless password, please do the following:

You can just run the wizard which will allow you to set this up very easy or if you want more control, you can do this by going to Basic Mode --> Wifi

Wifi	
Here you can configure installed wifi devices.	
Devices	
enable	<input checked="" type="checkbox"/>
Wifi Channel	6
Hardware Mode	g/n Mixed
HT mode	20MHz
Press Here to RESET Wireless to Factory Defaults	
Press Here to RESET Wireless to Factory Defaults	
This Button will run a script to reset wireless profile	
wifi basic settings	
MAIN	
disabled	<input type="checkbox"/>
Hardware Mode	Provide (Access Point)
Network Name (ESSID)	MofiNetworkEC4
Hide Wifi Access Point	<input type="checkbox"/>
Isolate	<input type="checkbox"/> This will separate the AP from the rest of the network
Enable WPS pushbutton, requires	Enabled
WPA(2)-PSK	
Wifi Security	No Encryption
Encryption/Security Type (WPA2-PSK) is recommended	
Encryption Type	AES
Wireless Password/Key (Case Sensitive)	
Passwords Must be between 8 and 63	

The most popular encryption is WPA2-PSK. It is recommended to select this and enter the password in the Key Field (minimum 8 characters)

Click on Save to save the changes

How to forward ports:

(Note you will need a public IP address in order to do any port forwarding)

MOFI offers a public IP service that you may be able to get depending on what you need this for. By default, most cellular connection does not provide a public IP so you may need this server. Contact us for a free trial.

Port forwarding

Port forwarding allows to provide network services in the internal network to an external network.

If you have a static IP on a device, you should enable a device scan at boot up that is located in Overview -> Connected Devices -> Configure
This will let the MOFI detect your static setting automatically as well as add the device automatically to the static route that is located in Network -> DHCP and then Static Leases

Name (optional)	Select External Source Select Wan or VPN Source (make sure if split tunneling that device is in the list)	Protocol	External port	Internal IP address	Internal port (optional)	
DVR	vpn	TCP+U	9000	192.168.10	9000	Delete
Add						

Reset Save

Located in Basic Mode on the top right

Port Forwarding on the side under Network

Click on Add

For Name, enter whatever you want to call it

Select the Protocol you want to use

Enter the external port that you want to forward to

Normally internet and external ports would be the same

Select your ip address that your device you want to forward to

Click on "Save"

If you are using a mobile internet connection like a cellular connection, you will probably have a private IP from your provider. If you have a private IP, you will not be able to use any port forwarding features.

If you would like a public IP that will work with port forwarding, we offer a service call Mofi Cloud Link for \$14.99 a month. Call us to get this set up.

There are 2 ways to get around this,

Is it contact your provider and try to get a public IP address. Some provider do not offer this.

We offer a public IP option for \$14.99 a month. To get this, contact us and we can instantly set up your account and you will be able to get a public IP address and have access remotely to your network. A lot of customers use this option to use with a video camera system so if this is something you are looking to do, contact us toll free at 1-888-499-0123 or email sales@mofinetwork.com

How to open ports in the router:

Note that normally, you would not have to do this. If you feel you need to, first double check as when you do a port forward, it should automatically open the ports for you.

These are the default port that are open by default

WEB 80

SSH 22

HTTPS 443

RDP 3389

UDP 68

If you want to be use or open some of the uncommon ports to connect to your DVR or other devices from the outside, below is the instruction on how to open up ports.

note that when you do a port forwarding rule, it normally opens the port by default so the below is normally not needed.

Log into the router

Click on Advanced Mode --> Network Tab --> Firewall

Under Rules, click Add

For the Name, put whatever you like to describe it

Source Zone: Leave at WAN/USB

Protocol: Select which one you want or "Any" if you are not sure

Source Address: Leave it default "any"

Destination Address: (this is where you would enter the port you would like to open) example 2100

Action: Leave default at "accept"

Click "Save & Apply" to save the changes

Now the port is open in the router.

To actually use this, you may have to set a port forward rule

The easiest way is to upgrade to version 3.1 or later where has the port forwarding in the basic menu

Click on the basic mode --> Network Tab --> Port Forwarding

Click on Add

For Name, enter whatever you want to call it

Select the Protocol you want to use

Enter the external port that you want to forward to

Select your ip address that your device you want to forward to

Click on "Save"

How to Set a Wireless Bridge/Repeater:

The first thing you need to know ahead of time is the wireless SSID (network name) and password of the device that you want to connect to if it has a security enable on it. Note it is case sensitive so make sure you have everything exactly the way it is.

If you are using a hotspot device such as the MiFi units, the wireless password is printed on the inside cover of the unit.

Connect the router to your pc with the Ethernet cable in one of the 4 ports (not the WAN port)

Open your web browser such as internet explorer or Fire Fox (do not use any other browser to set up router, after it is set up, you can use any browser to surf)

Log into the router,

http://192.168.10.1

username: root

password: admin

1. If your hotspot or other router that you want to get the internet from has as the ip address range of 192.168.10.something, then you need to do the following 2 steps, if not go to step 3.

Note that most devices such as the wifi hotspot do not have this address so most likely you can skip this.

Go to "Network -> Interfaces -> LAN" and set the IP address subnet to something other than the ip range of the origin router.

(example, if the original router is 192.168.10.1, then you have to change the setting on this router such as to 192.168.50.1, but both router cannot have same ip address)

2. If you had to change the router ip address, Select the "Save and Apply" button. Since you just changed the IP of the router, you will need to re-connect your PC to the router (DHCP). Close your browser and wait for a few mins then reopen browser again.

You can also speed this up by taking out the network jack at back of the router and put it in another one of the 4 ports. Else worst case, just reboot your pc.

After your PC has received a new IP address, enter the router's new IP address in your web browser and re-login to the router using the new ip you selected.

If you changed the router ip for example to 192.168.50.1, then you need to enter this in order to log into the router.

If you make a mistake and loose connection to the router, you can reset the router by hold down the reset button in the back (next to the USB port) for 2 seconds while the power is on the router. After you release the button, the router will reset back to the default address 192.168.10.1

3. Go to "Network -> Wifi Bridge/Repeater"

4. Enter the SSID of the main router you are trying to connect to and the wireless password. You can select this from the box. If you are unable to select this, click on the Wifi Bridge/Repeater on the left hand side again to refresh that screen.

5. Under repeater mode, change it to ENABLED and enter the SSID that you want to use for the repeater router. For the wifi security, select WPA2-PSK and then enter the wifi password that you want to use for the new router.

6. When completed, click on save,

It should take 1 min for settings to be saved.

After it is saved, you should reboot the router by taking the power off and then one again.

After router comes back up, you should have internet access off it.

If you are having issues, go back to the wireless bridge/repeater section and go to the bottom and click on the button "Press Here To Update Wifi Profile if Unable to Connect"

After you do that, best to reset the router by going to system in the basic mode then factory default and do a factory default and start over again.

You can use this for example to supply internet to multiple devices connected to the Ethernet port and this is a great way if you want for example to connect your DVD Player, TV, or other device to the internet without having to run network cables in your living room.

For many customers, you might want to use this wireless repeater to boost the signal in different parts of your house like the basement.

How to do a Firmware Upgrade:

There are 2 ways to do an update.

One is if you have internet access, you can do a remote update.
This is located in Basic Mode --> System --> Remote Update

If you do not have internet access on the router, you may have to do a manual firmware update

Go to www.mofinetwork.com

Then go to support then download

At this point, you will need to ensure you are downloading and installing the correct firmware for your device.

Currently there is the MOFI4500 V1, V2 and V3 model

The V1 model does not say V1. If it does not say V2 or V3, this it is V1.

For the V3 and V3 model, it will say on the top as well on the bottom of the router.

For the V3 model, the serial number will start with MOFI4500V3

Download section to get the latest firmware

Follow the instructions there on how to do the update.

If you make a mistake or an error and the router is non functional, look at our section below on how to do a MOFI Recovery.

How to Remote Login into the Router:

Remote Login is enabled by default and can be access on port 80,81 and 8080

Port 8080 is the official port for remote access

If you have a public IP address, you will be able to access your router remotely by going to:

`http://yourpublicIPaddress:8080`

However, if you are using a cellular connection and have not paid or added a public ip option to your account, you cannot get direct access to the router as the NAT will not let you do this,

If you have a security camera system for example and want to log in directly, you will need to contact you provider and get a public ip option or contact us for a public IP option that we offer.

How to modify settings/ports for remote access to the router:

By default, the router is set to receive on port 80, 81 and 8080

If you want to change this, log into the router and go into Basic Mode --> Mofi Business --> Web Server

To change the port, click on the HTTP Port option and select custom

You can now delete what is there by default: 0.0.0.0:80 0.0.0.0:81 0.0.0.0:8080 and change it to what you want.

If you want port 90 for example, you would type: 0.0.0.0:90

If you want to disable access for remote access, just turn remote access off.

If you want to limit remote access to specific IP address, for Remote Access White list, turn it ON

For the Interface, select the current internet connection type you have. By default, WAN port is selected.

Under White list, type the IP address that can have access to the router.

If you want multi IP, click on the plus icon on the right

If you want to disable the reset button, you can also do it in this menu by checking the Disable Reset Button check box.

This is done for cases where you are worried someone may press the reset button that can lose all your setting change in the router.

Note if this option is Activated, you will need to use the MOFI Recovery if you lose access to router and need to gain access again.



There are many more features that are not covered in this manual such as

We are currently making some changes to this section but below is some more options not fully documented

- Parental Control Scheduler (ability automatically to allow or block access to individual devices via the mac address). This feature is great to block kids for use of internet when they should not be using it.
 - Wifi speed limiter. This allow you to set the upload and download speed of your wifi signal. You can add 2 wifi network and each of these can be individually control the speed. This feature would be great for customers of a bus company or store that want to give their customers access to the internet but do not want a customer to kill the bandwidth usage and cause a slow down for everyone else or use up too much data.
 - Bandwidth monitoring. This feature allows to see the usage at any point during the month for each individual device. This is great if you have an infecting device and want to track where the extra data use is coming from. It is suggest you enable the remote management and track the bandwidth uses there as this will give you the most accurate measurements
 - Bandwidth control: This feature allow you to set specific amount of data to an individual device via the mac address. You ,can also use this option in daily or monthly quota so if a user used too much data in the allotted time, they will loose internet access automatically until their time gets reset normally the next day or when the billing month starts over.
- Mofi Extended - An easy way to daisy change multiple MOFI routers to increase your wireless range using multiple MOFI routers. This method is the preferred way but will require connecting each router using a Ethernet (wired) connection.


FAIL OVER

If you require the highest stability, Fail Over can be a life saver. This feature is used if you have 2 activate internet connection. You can specify which connection you want as your main connection and if that is not available, it will jump to the secondary connection and then jump back to the primary connection when it is available.

To active fail over, go to Mofi Business --> Fail Over

1. Enable by checking box
2. Normally, 99% of customers wants WAN as primary and cellular as secondary so you can select the default profile. If you want to change, select the option you need.
3. Save & reboot router

Fail Over. Ability to run 2 connections at the same time. Only use the second connection if the first connection fails. It will automatically go back to the primary connection once it is back. This is great for someone looking for a backup solution.

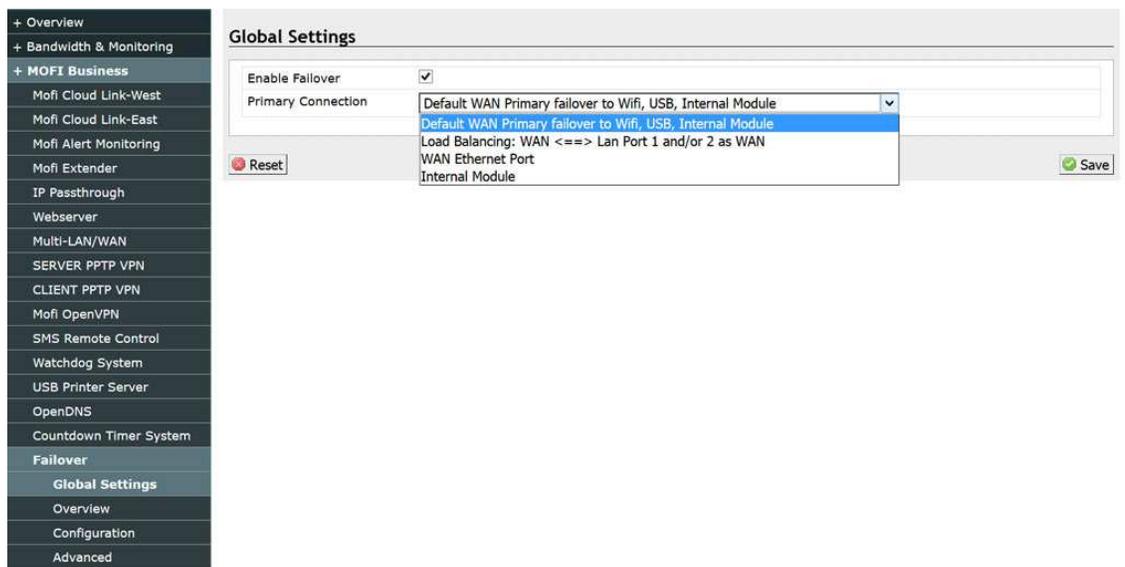

The screenshot displays the 'Global Settings' page for the Mofi Business router. On the left is a navigation menu with the following items: Overview, Bandwidth & Monitoring, MOFI Business (expanded), Mofi Cloud Link-West, Mofi Cloud Link-East, Mofi Alert Monitoring, Mofi Extender, IP Passthrough, Webserver, Multi-LAN/WAN, SERVER PPTP VPN, CLIENT PPTP VPN, Mofi OpenVPN, SMS Remote Control, Watchdog System, USB Printer Server, OpenDNS, Countdown Timer System, Failover (selected), Global Settings (current page), Overview, Configuration, and Advanced. The main content area is titled 'Global Settings' and contains the following configuration options:

- Enable Failover:** A checked checkbox.
- Primary Connection:** A dropdown menu with the following options:
 - Default WAN Primary failover to Wifi, USB, Internal Module (selected)
 - Default WAN Primary failover to Wifi, USB, Internal Module
 - Load Balancing: WAN <==> Lan Port 1 and/or 2 as WAN
 - WAN Ethernet Port
 - Internal Module
- Reset:** A button with a red circular icon.
- Save:** A button with a green checkmark icon.

LOAD BALANCING

If you require the fastest internet possible, the Load Balancing feature will allow you to take two WAN connections and make the work as one.


This feature is currently being worked on. Contact us for more details on this.

To active fail over, go to Mofi Business --> Fail Over

1. Enable by checking box
2. Select Load Balancing
3. Save & reboot router

With this feature, you will need to have 2 internet connections (one is the WAN port and the other in port 1)

This feature also includes fail over simultaneously so if one connection fails, the other will still work. If both connections are working, they will bind together and work as one. This will ensure the faster connection speeds possible than any single connection connected.

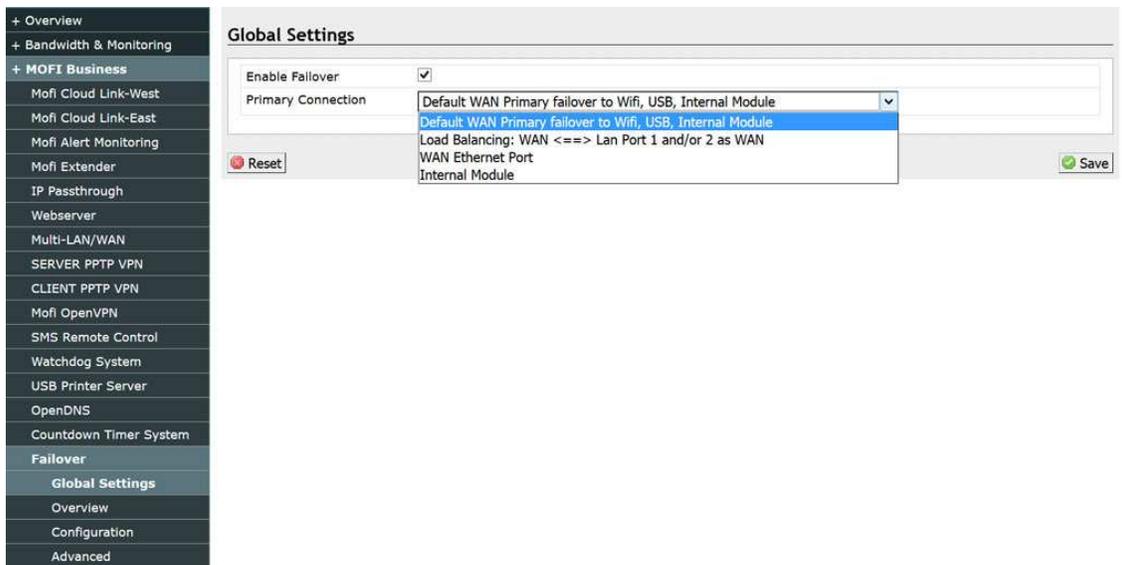

IP Pass Through

MOFI NETWORK MOFI4500-4GXeLTE-V2

- + Overview
- + Bandwidth & Monitoring
- + MOFI Business
- Mofi Cloud Link-East
- Mofi Heart Beat
- IP Passthrough
- Webserver
- IPSec
- Mofi Adblock
- SERVER PPTP VPN
- CLIENT PPTP VPN
- SMS Remote Control
- Watchdog System
- Countdown Timer System
- OpenDNS
- Failover/Load Balancing

IP PASSTHROUGH

IP PASS-THROUGH exposes your outside IP to the LAN interface - EVERYTHING is allowed

***** NOTE: When Enabled please reboot router and wait up to 2 mins to activate

Enabled

Primary Connection Built-IN MOFI Modem

Static IP Mode (default is DHCP) Dhcp
ⓘ Please Contact MOFI before using, If Set to Static, Please enable static config on device

Select Which DNS to Use Use Your Own (Custom)
ⓘ tell IP-Passthru if it should use the ISP or a User Entered one..

Custom DNS 8.8.8.8 8.8.4.4
ⓘ Enter DNS Server's with a space

With IP Pass Through, this feature will make your router to work as a modem. Only 1 device can be connected via Ethernet Port 1.

Enable, save and then reboot router. You normally never need to change any of the default settings here.

When IP Pass Through is on, your wifi will automatically be disabled.

If you are connected to a device, all ports will be sent to this. This feature will pass everything over to the device connected.

If you connect a different device, you will have to reboot the router for this to be active.

If you need access back to the router after it is in IP Pass Through Mode, go to <http://192.168.10.1:8080> or if you have a public IP Address, <http://yourpublicIP:8080>

Note that by default, most cellular connection provides a private IP address and as such, port forwarding will not work.

If you require a public IP address, contact us about this option.

MOFI RECOVERY (For MOFI4500 V1/V2 only, note for the V3 version, it has a bit different process)

How to recover router from wrong file update or other problem

This MOFI utility will restore your MOFI MOFI4500-4GXeLTE V1/V2 router back to working mode.

It will only work on any operating system like Windows, MAC, Linux

Here is a video on how do this:

https://www.youtube.com/watch?v=1dJPC_X5lo&t=2s

Step 1: Set router is recovery mode

Connect the router to your pc with an Ethernet cable to port 1 at the back of the router.

Unplug the router and press and hold the reset button on the back of the router.

Plug back in power in router and after 10 seconds, release the reset button.

The Wifi status should be blinking fast and as such, the router is now is recovery mode.

If it does not blink, try it again.

Step 2: Set your network connection to static ip address: 192.168.1.7

To set your static ip address, you can do this:

Go to control panel --> network connection or network and internet

then network and sharing center

then click on change adaptor settings or network connections

under network connections, right click on local area connections and then select properties

click on Internet Protocol TCP IP V4 so it turns blue

click on properties and enter the below:

IP: 192.168.1.7

subnet: 255.255.255.0

default gateway: 192.168.1.1

Then go out and save

Step 3: Mofi Recovery Interface

Open your web browser to

http://192.168.1.1

Browse to the file you want to recover to and open and run

Will take approx 4 mins for router to complete.

You will see the power/booting status light go off and flash and then go back solid

Step 4: Set back your network cable to automatic


To set your network card back to automatic, you can do this:

Go to control panel --> network connection or network and internet

then network and sharing center

then click on change adaptor settings or network connections

under network connections, right click on local area connections and then select properties
click on Internet Protocol TCP IP V4 so it turns blue
click on properties and select “Obtain an IP address automatically”
Also, make sure the DNS is set to “Obtain DNS server address automatically”

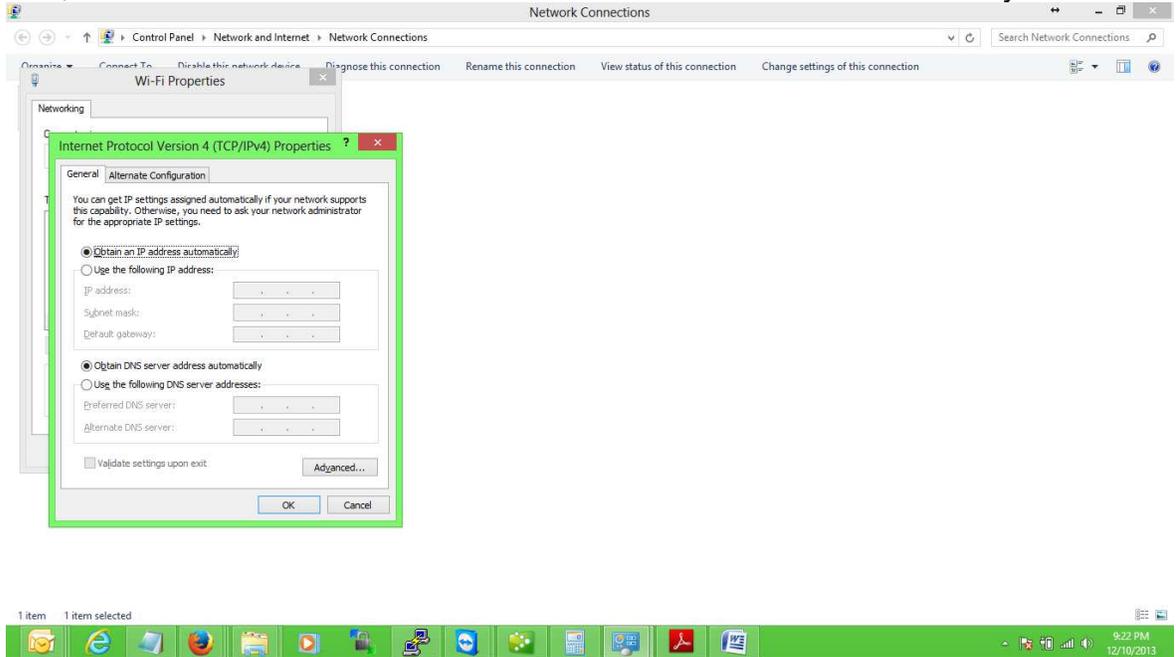

Step 5: Log into the router

Now, you will be able to log back in the router.
To log in router, go to <http://192.168.10.1>

username: root
password: admin

MOFI RECOVERY (For MOFI4500 V3 only, note for the V1/V2 version, it has a bit different process)

How to recover router from wrong file update or other problem

This MOFI utility will restore your MOFI MOFI4500-4GXLTE V1/V2 router back to working mode.

It will only work on any operating system like Windows, MAC, Linux

Here is a video on how do this:

https://www.youtube.com/watch?v=1dJPC_X5lo&t=2s

On the MOFI4500-4GXLTE V3 model, it has 2 type of recovery. The first step will not require recovery file but this recovery does not work if the directory gets deleted To try, simple follow the basic steps

Step 1: Take the power off the router

Step 2. Hold the reset button down at the back of the router

Step 3: Power on the router and keep holding the reset button.

Note about 5-6 seconds, you will see the 2rd led (internet LED) start to flash. Keep holding down and a few seconds later, you will see the internet LED start to flash faster.

When you see this, release the reset button at the back of the router and wait about 2-3 mins and see if the router will recovery and if the Power LED goes solid.

If it does, then you can connect to the wifi and log into the router

<http://192.168.10.1>

then you can download the latest firmware of the V3 firmware on our side and do the update.

If this step does not work, then you will need to do the recovery where you will need to connect the router with an Ethernet Port. You will need to download the recovery firmware.

At the same time, you should download the latest firmware for the MOFI4500 V3 download.

Here is a link to the MOFI4500 V3 Recovery file:

http://mofinetwork.com/firmware/mofi4500v3/MOFI4500V3_RECOVERY.bin

Step 1: Set router is recovery mode

Connect the router to your pc with an Ethernet cable to port 1 at the back of the router.

Unplug the router and press and hold the reset button on the back of the router.

Plug back in power in router and after 10 seconds, release the reset button.
The Wifi status should be blinking fast and as such, the router is now in recovery mode.

If it does not blink, try it again.

Step 2: Set your network connection to static ip address: 192.168.10.7

To set your static ip address, you can do this:

Go to control panel --> network connection or network and internet

then network and sharing center

then click on change adaptor settings or network connections

under network connections, right click on local area connections and then select properties

click on Internet Protocol TCP IP V4 so it turns blue

click on properties and enter the below:

IP: 192.168.10.7

subnet: 255.255.255.0

default gateway: 192.168.10.1

Then go out and save

Step 3: Mofi Recovery Interface

Open your web browser to

<http://192.168.10.1/recovery>

Browse to the file you want to recover to and open and run

Will take approx 4 mins for router to complete.

You will see the power/booting status light go off and flash and then go back solid

Step 4: Set back your network cable to automatic

To set your network card back to automatic, you can do this:

Go to control panel --> network connection or network and internet

then network and sharing center


then click on change adaptor settings or network connections

under network connections, right click on local area connections and then select properties

click on Internet Protocol TCP IP V4 so it turns blue

click on properties and select "Obtain an IP address automatically"

Also, make sure the DNS is set to "Obtain DNS server address automatically"

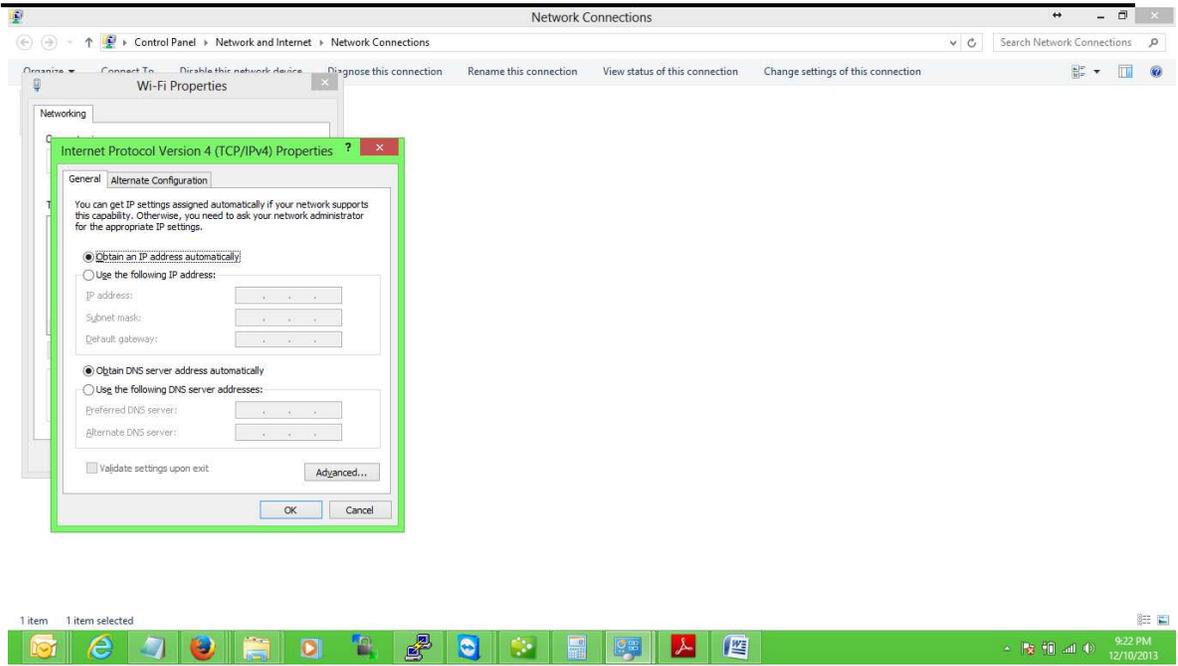

Step 5: Log into the router

Now, you will be able to log back in the router.
To log in router, go to <http://192.168.10.1>

username: root
password: admin

Once you are in
You can now load the latest firmware to bring the router to the latest version.

MOFI REMOTE MANAGEMENT

How to Enable Remote Management

With your MOFI router, you have the ability to access your router status and make various changes if need all from an online interface on our server. To use this feature, you will need to enable this option that is located in:

Basic Mode --> System --> Remote Management

The way this works is the router will contact the server every 4 mins and check to see if there are any changes needed. If there is, it will take and apply them. This remote management feature will work on both a public and private IP address and no need for any special IP settings for this to work.

For customers that want to have all their routers show up under one account so it can easily be managed, contact us for how you can do this.

The screenshot shows the 'Mofi Remote Agent' configuration page. On the left is a navigation menu with options like Overview, Bandwidth & Monitoring, MOFI Business, Wizard, Gather Support Logs, Network, General, 3G/4G/LTE Usb Port, Wifi, Wifi Bridge/Repeater, Captive Portal, WPS, and DHCP. The main content area is titled 'Mofi Remote Agent' and contains a checkbox for 'Enable' (unchecked) and a button for 'Open Remote Management Interface'. Below this, there is a form with the following fields: 'Router's Serial Number' (78A3510F2884), 'Update Agent every (Seconds)' (240), 'Password for Server' (admin), and 'Installer Code' (1). At the bottom right of the form are 'Reset' and 'Save' buttons.

Step 1: Enable it by checking the tip box on

Step 2: Save Settings

Step 3: Reboot router so router can contact our server and set up your account automatically

Step 4: To access your router, go to this link or click on the link where it displays "Open Remote Management Interface"

<http://www.moficloud.com:81/control/sign-in.php>

Your Username/Serial number is the MAC Address in the router

The default password is admin:

Once you log in, you will be able to change your admin password

Mofi Network Remote Management

In	Username: 78A3510F2884																		
Page	Login ID: 2060																		
Page	Max Number of Connections: 1																		
ford	out	ID	User	Version	Model	Serial	Connected Via	IP Address	Internet	Last Seen	Edit	Router/WiFi Password	Wifi SSID	Wifi Status: ON	Show Remote GUI: NO	Bandwidth	Firmware Operations	Factory Default: NO	Reboot
		2060	78A3510F2884	2.0-beta	mofi4500-4gxelte-v2	78A3510F2884		24.114.67.72 Location: unknown	ACTIVE	2016-04-15 00:11:05									

ID: This show your ID for your router that is internet to MOFI NETWORK

User: This is your MAC Address on your router

Version: This is the firmware version that is being used on your router

Model: This is the model router you are using

Serial: This is your MAC Address

Connected VIA: This will show how you are connected, WAN or 4G/LTE

IP Address: Your public IP address you are assigned. Note that your internal IP address assigned by the provider might be different since be default, most providers provide a private IP address

Last Seen: This is the last time the server has seen your router

Edit: In this section, once you click on that, you will have the option to change your password on the server. Default is admin

Router/Wifi Password: You can change both your Router Admin password and/or your Wifi password in this section

Wifi SSiD: Section to change the network name on your router

Wifi Status: Section to turn wifi on and off.

Show Remote Gui: Section to allow or disable the option to turn on/off remote management after it has been enabled. You sometimes might not want to have the ability to disable the remote management by the user and this is how you can do this.

Bandwidth: Ability to turn on and off bandwidth monitoring

Once bandwidth is hit, you will still be able to access the router via this management interface but not will have no internet.

Firmware Operation: Ability to push a firmware update to the router

Factory Default: Ability to do a factory default on the router

Reboot: Ability to reboot router

MOFI CLOUD LINK

STATIC DEDICATED PUBLIC IP SERVICE

Do you need a public IP?
Do you know what is?
99% of all provider gives you what is called a private IP address.

With a private IP address, you cannot do any port forwarding so if you have a device that needs to forward a port like a camera system, you will need to get a public IP.


Some providers offer this as an add-on but recently, many provider are not offering this as an option and the MOFI CLOUD solution would make a great solution.

We have this service called MOFI CLOUD that will give you a dedicated static public IP address. This means your IP address will not change and it is not share with anyone and will have fully open ports even if they provider has them closed. A wonderful benefit of the MOFI CLOUD is it does not matter what connection or provider you use, you will always have the same IP. So if you want a WAN (cable/DSL/satellite) connection or 3G/4G/LTE connection, it does not matter. If you have a cellular connection and change provider, it still does not matter.

To use, contact us and we will set you up with a 7 days free trial and assign you a username, password and static IP.

By phone 1-888-499-0123 or email: sales@mofinetwork.com

Once you have your account info
Check to enable CloudLink
Select the location that your account is on
Enter Username and Password
Then Save and reboot router.
Note that if made a mistake and saved it, you will need to press the Reset Cloudlink button. This will reset the setting there and reboot the router.

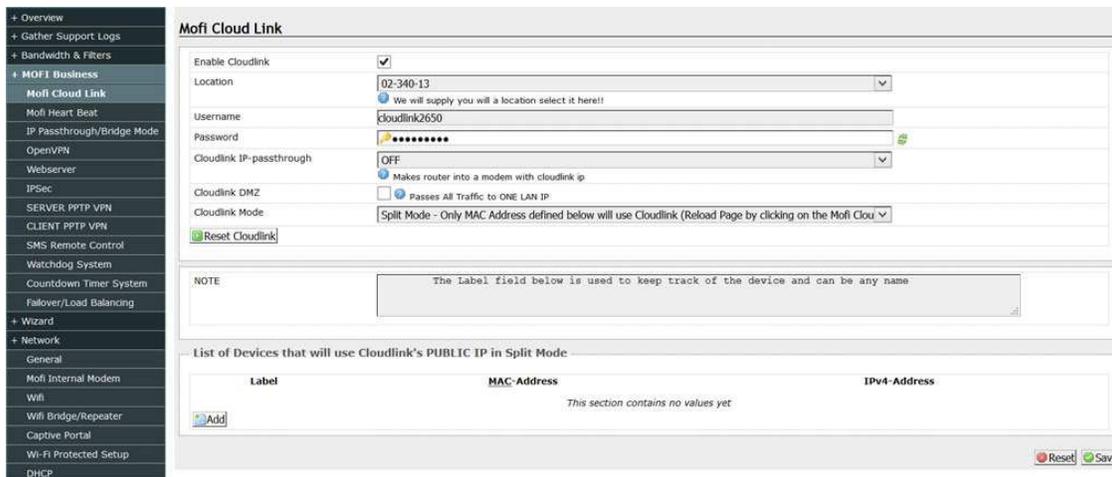

Now you have your public IP address assigned and can access your router anytime
<http://YourPublicIP:8080>

To add a device like a video camera recorder (DVR) to get this public IP address and be able to view your video for example from the outside,
 Go back to the MOFI Cloud section where you put in your username and password and in the bottom, there is an option to add the mac address of the device you want to use a public IP address with. You can add as many device that you require.

Add the MAC of the device that you would like to you user and the IP Address associated with it then save. Once this is saved, it will take effect instantly.

Normally before you do this, if you are using a device that has a static IP address, it is recommended first to add a static route.

To do this, in Basic mode, go to Network --> DHCP


Scroll to the bottom and under Static Lease,

Click on Add

Enter a name to identify your device and select the mac address for it and set the IP address that you want it to use.

Then click on Save


After it is saved, reboot the router

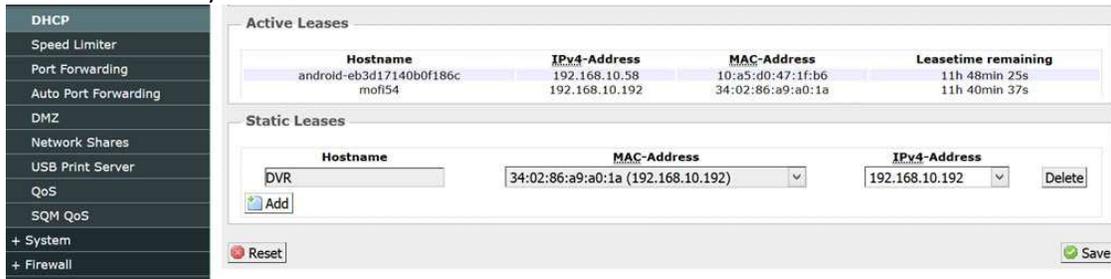

The last step is to do your port forwarding.

Since you are using the MOFI CLOUD, when you go to Network --> Port Forwarding

You will have to use CloudLink/VPN instead of WAN for the External Source

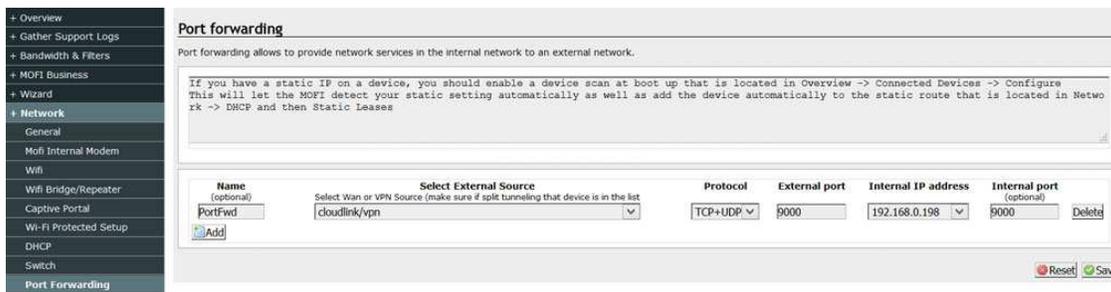

That would complete your set up for a device using our MOFI CLOUD.

In some cases, you might not want to use port 80 which is set as default in the router.


If you want to use this, you will have to de-select port 80 that is in the router.

To do this, go to Mofi Business --> Webserver

For the HTTP Port, change it from the default 80/81/8080 to 8080 which is the most common, then click on save.

If you change the http port to 8080 for example, to access the router locally, you will need to go to

http://192.168.10.1: 8080 or http://yourpublicIP:8080

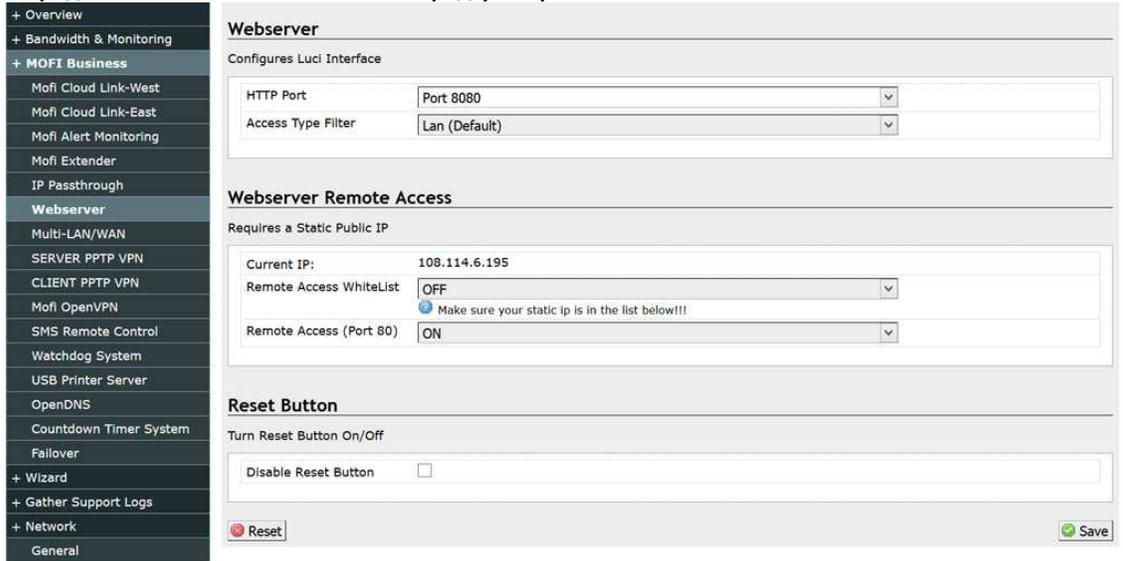

After you reboot the router, to access the router again, you will need to go to http://192.168.10.1:8080

OR

http://YourPublicIPAddress:8080

Since the MOFI router is not using port 80 now by default, you can use this for your device that might need port 80.

BAND LOCK

Manually Setting LTE Band

An LTE band is the frequencies that the provider is using. Here are some potential bands for various provider.

If using the MOFI4500-4GeLTE-SIM4:

AT&T: B2, B4, B5, B12/B17, B30

Sprint: B26, B26, B41

T-Mobile: B2, B4, B12/B17

Verizon: B2, B4, B5, B13

If using the MOFI4500-4GXeLTE-SIM7

AT&T: B2, B4, B5, B12/B17, B14, B66

T-Mobile: B2, B4, B12/B17, B14, B66, B71

Verizon: B2, B4, B5, B13, B14, B66

To do band lock, log into router and go to

Mofi Internal Modem

Then Click on Band Lock on the left

Select the Band that you need and test

Note is some cases, you might not have that band available and possibly only have 1 LTE band.

In very rural areas, band, 12,17 and band 13 are the 700 Mhz bands and should be the strongest but sometimes the strongest does not mean the fastest so you should test each band and run a speed test by going to speedtest.net

BANDWIDTH MONITORING

If you want to set a limit of usage per device, this is where you set this.

1. You will need to enable Bandwidth Monitoring

To Enable, this, go to Bandwidth & Filters on the left hand side

Then Check the Enable option and set the day of the month that your billing cycle starts over at.

Then Save and Reboot router

What this will now do is show the individual usage of all devices connect to router. This is a nice way to see if a pc is infected with a virus if for example you are not using it and you noticed an unusual high usage.

Note it can take up to 5 mins for the usage to be updated in this page.

The screenshot shows the 'Bandwidth Monitoring' configuration page. On the left is a navigation menu with 'Bandwidth & Filters' selected. The main content area is titled 'Bandwidth Monitoring' and contains the following sections:


- INFORMATION**: A text box explaining that the feature monitors usage of all devices connected to the router and provides instructions on enabling it and setting a reset day.
- Bandwidth Usage Settings**: A section with three controls:
 - Enabled**: A checkbox labeled 'This will enable the Bandwidth Monitoring per User' which is checked.
 - Reset Month**: A dropdown menu labeled 'Enter Month to Reset Database' with 'Every Month' selected.
 - Reset Day**: A dropdown menu labeled 'Enter Your Billing Date to Reset Billing Period' with '29th' selected.
- Bandwidth Usage Amounts in Monitored Period**: A section showing usage statistics:
 - BANDWIDTH**
 - Total Uploaded Amount : 0 KB
 - Total Downloaded Amount : 0 KB
 - Total Bandwidth Amount : 0 KB
 - Previous Period Total : 0 KB
 - Bandwidth Amount :
 - Buttons: 'Press Here to Reset Usage', 'Press Here to Reset Usage Database Previous Months Totals will be Erased', and 'Database Previous Months' (with a blue icon).
 - Text: 'This Button will run a script to remove the database Totals will be Erased'
- Individual User Bandwidth**: A table header with columns: 'User IP', 'MAC-Address', 'Upload', 'Download', and 'Total'.

Bandwidth - USER LIMITS

Make sure the Bandwidth Monitor is enabled as explained above.

If you are looking to set a limit of data use to an individual device, you would enable the User Limits

Enable the User Limits by clicking on the check box

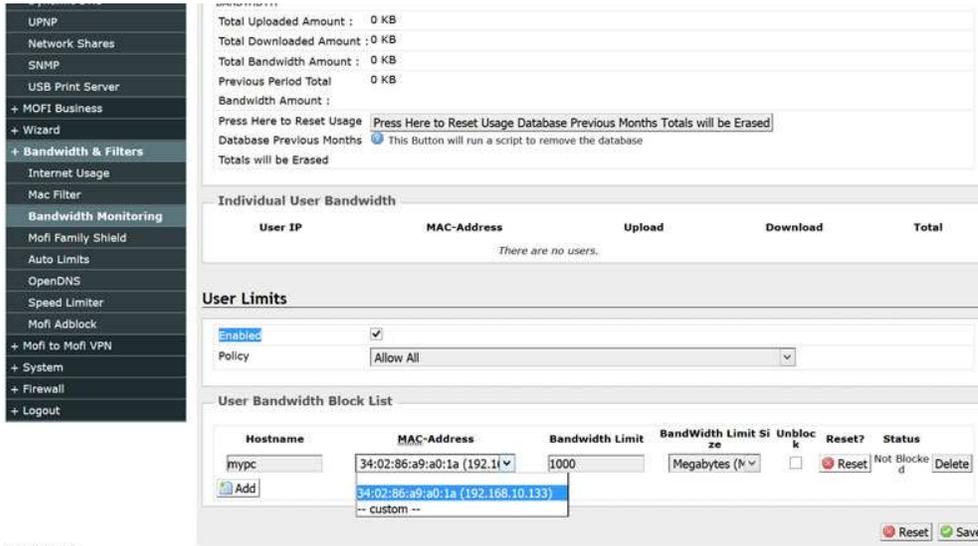

Click on Add and add the device you want to set the limit for. Note you will need to know the MAC address of the device that you want to set the limit. You can also see the IP address that the MAC is associated to.

Set the Limit you want, then save and reboot router.

When the user hits this limit, they will not have any access to use more data. You have the ability to override this by checking the Unblock Option if you need to as well as see if the limit has been ready by looking at the status as the image is shown above.

TROUBLESHOOTING

Here are some basic troubleshooting steps:

Here is a video to look at also

<https://www.youtube.com/watch?v=KPqpnshPaA0&t=3s>

For most customers, the first step in trouble shooting is to do a module reset then a factory default.

Log into router

http://192.168.10.1

user name: root

password: admin

after you log in

go to mofi internal modem

then on the bottom, click the button to reset the module

this will reset the module and reboot the router

once that is done

close your internet browser

make sure you are connect back to the MOFI wifi or via Ethernet cable

then log back in

once you are in

go to system then factory default

then perform reset

this will reset and reboot router

if you can't get into the router, you can reset it manually by power off then on the router

when the power led is solid

then press and hold the reset button down for 10 seconds and then release

after a few seconds, you will see power LED start to flash and then go solid after about 1-2 mins

if you see this, then the router should be reset.

once router is back up

the internet should work

if not

close your internet browser

make sure you are connect back to the MOFI wifi or via Ethernet cable

then log back in

go to mofi internal modem

What does it say for the carrier ID?

By seeing the carrier ID, you know that the SIM card is being read fine.

What does it say for the phone number? If the sim card is activated, a phone number should show up there

If this is still not working,

You should contact your provider and verify what APN (access point name) that you need use. Once you know what APN you need to use, log into the router and go to mofi internal modem

Then click on country and select custom apn

Then enter the apn you need to use

Then save

After it is saved, reboot the router

If this is still not working, ensure that you have all 4 antennas on and you are getting a proper signal.

Regulatory Compliance Notices

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15, 22 and 24 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio or television technician for help.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by MoFi Network could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and

This device must accept any interference received, including interference that may cause undesired operation.

Exposure Information to Radio Frequency Energy

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

European Regulations

The product has been designed, tested and manufactured according to the European R&TTE directive 1999/5/EC.

